 


How To Use Your Kidde Extinguisher

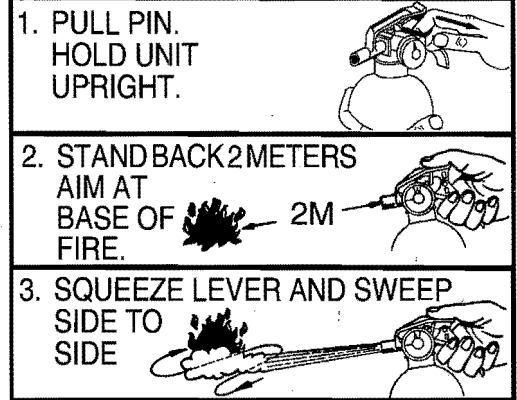

After the fire is out, clean up dry powder immediately to avoid corrosion.

CAUTION: Under certain fire and heat conditions, the dry powder in this extinguisher (and similar units) will cause damage or prove extremely difficult to remove from oven surfaces, including self-cleaning models. Do not use self-cleaning feature to remove ABCE Powder.

CAUTION: Avoid inhaling the dry powder agent. The agent contained in this extinguisher is not toxic, but may cause skin irritation. In case of contact, flush affected area with clean, cool water. If irritation persists, contact a physician immediately. Chemical name of agent is printed on extinguisher label.

Inspection And Maintenance

To insure that your fire extinguisher will be ready when needed:

- Read and follow all instructions on label and in owner's manual.
- Inspect the extinguisher AT LEAST once a month — more frequently if exposed to weather or possible tampering.
- Check that extinguisher is charged. Pointer on pressure indicator MUST be in green section. If pointer is in red or white section extinguisher is NOT ready for use.
- Be sure the lock pin is firmly in place.
- Keep the extinguisher clean. Check for dents, scratches, corrosion or any other damage. Check the discharge nozzle. Make sure it is clean and free of obstructions.

**DO NOT TEST
BY PARTIALLY DISCHARGING.
LOSS OF PRESSURE WILL OCCUR.**

Six-Year Limited Warranty

For six (6) years from date of purchase, KIDDE will repair or replace this product to the original owner free of charge, if defective in material or workmanship. This warranty does not apply to damage resulting from accident, alteration, abuse or failure to follow instructions supplied.

KIDDE, at its option, may refund the purchase price in lieu of replacement or repair. ANY AND ALL IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO A PERIOD OF SIX (6) YEARS FROM DATE OF PURCHASE. KIDDE, its dealers and distributors shall not be responsible or in any way liable for any special or consequential damages for breach of any warrant or implied warranty.

 
Which Extinguisher To Use

There are two common types of fire extinguishers. Type ABCE extinguishers fight wood, paper and cloth fires, plus flammable liquid, gaseous and electrical fires. Type BCE extinguishers are for flammable liquids, gaseous and electrical fires.


To determine which class or classes of fire your extinguisher is designed to fight, locate the blue use code symbols on the front extinguisher label.

Using the wrong extinguisher on a fire could do more harm than good. Be sure you understand which extinguisher is appropriate for each class of fire. For protection against ALL COMMON CLASSES OF FIRES, you must choose a type ABCE extinguisher.


How To Assemble And Install Molded Strap Bracket

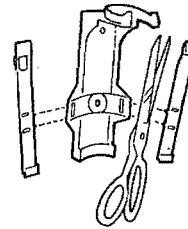

 
1. Remove straps from bracket with scissors.

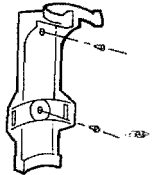

 2. Fasten bracket to wall with two 1/4" screws and washers (not included).

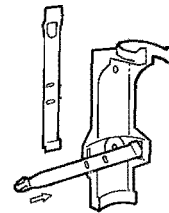

 3. Push ends of straps through slots on bracket (side of strap with circles faces outward).

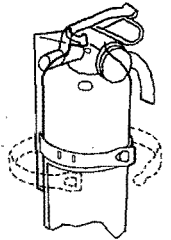

4. Place extinguisher into bracket. Buckle straps together to lock in place.

For More Information

For more information on fire fighting, contact your local fire department.

WALTER KIDDE
MILL HOUSE POYLE ROAD
COLNBROOK SLOUGH
BERKS SL3 0HB
UNITED KINGDOM
MANUAL P/N 340421