



79472
74207

Strada Braglia - 26862 Guardamiglio (LO) - Italy

EASY kit

KIT CITOFONICO 1- 10 POSTI


DOORPHONE KIT 1- 10 UNITS

KIT PARLEPHONE 1- 10 POSTES

KIT PORTERO ELECTRICO 1- 10 PUNTOS

KIT INTERFONICO 1- 10 LUGARES

Mod. 662xx / 6650x / 6656x

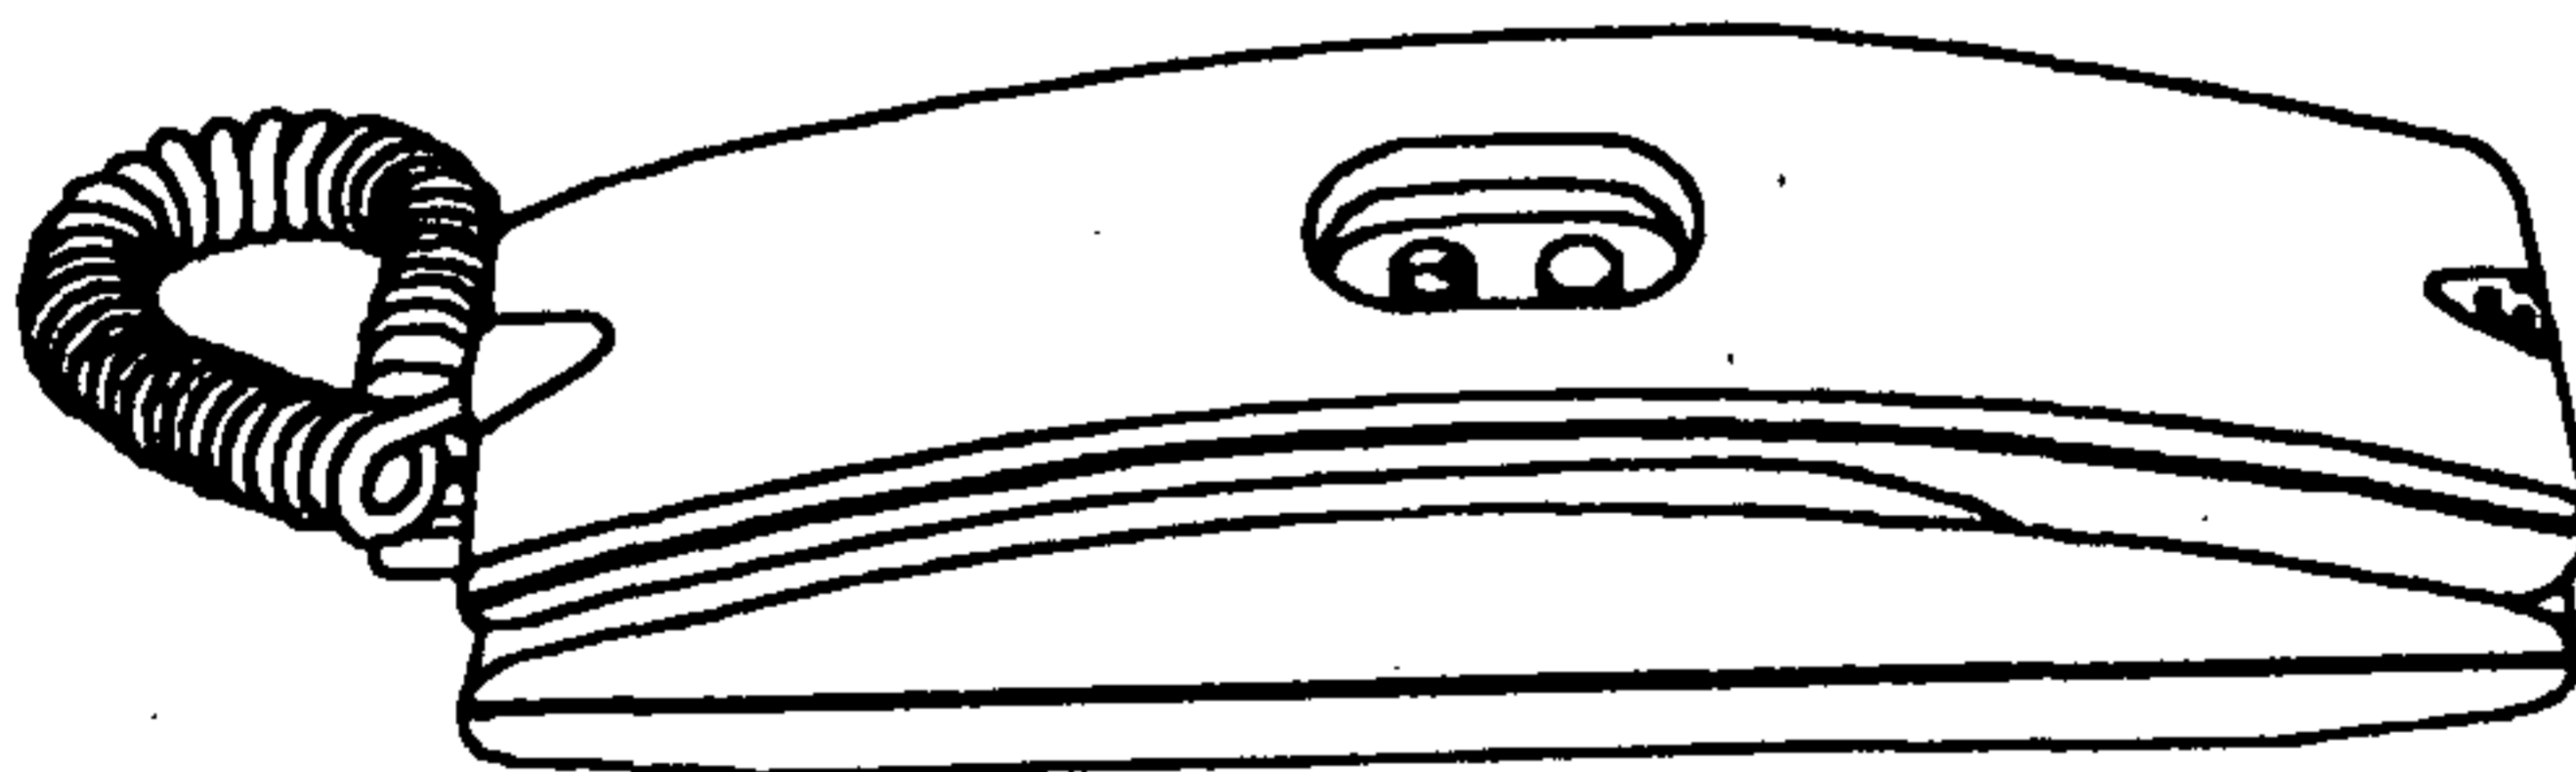

IMPORTANTE: Prima dell'uso leggere attentamente le indicazioni riportate sul presente foglio d'istruzione.

IMPORTANT: Before operating the system please read carefully the instructions on this booklet.

IMPORTANT: Avant l'emploi lire soigneusement les indications report es sur cette feuille d'instructions.

IMPORTANTE: Antes del uso leer atentamente las indicaciones consignadas en este folleto de instruccio n.

CE EN60555-2; EN60555-3; EN50081-1; EN50082-1


ALIMENTATORE / POWER SUPPLY / ALIMENTATION / ALIMENTADOR

Fissare l'alimentatore alla parete servendosi di due viti oppure agganciare alla guida DIN. Dopo aver effettuato il cablaggio montare le alette di protezione.

Fix the power supply on the wall with two plugs and screws or engage it on DIN rail. After the wiring install the plastic covers over the wire terminals.

Fixer le transformateur sur le mur par deux vis, ou sur le guide DIN. Après avoir connecté les fils, fixer les deux ailes de protection.

Sujetar el alimentador a la pared mediante dos tornillos o engancharlo a la guía DIN. Después efectuado el cableaje, montar las aletas de protección.

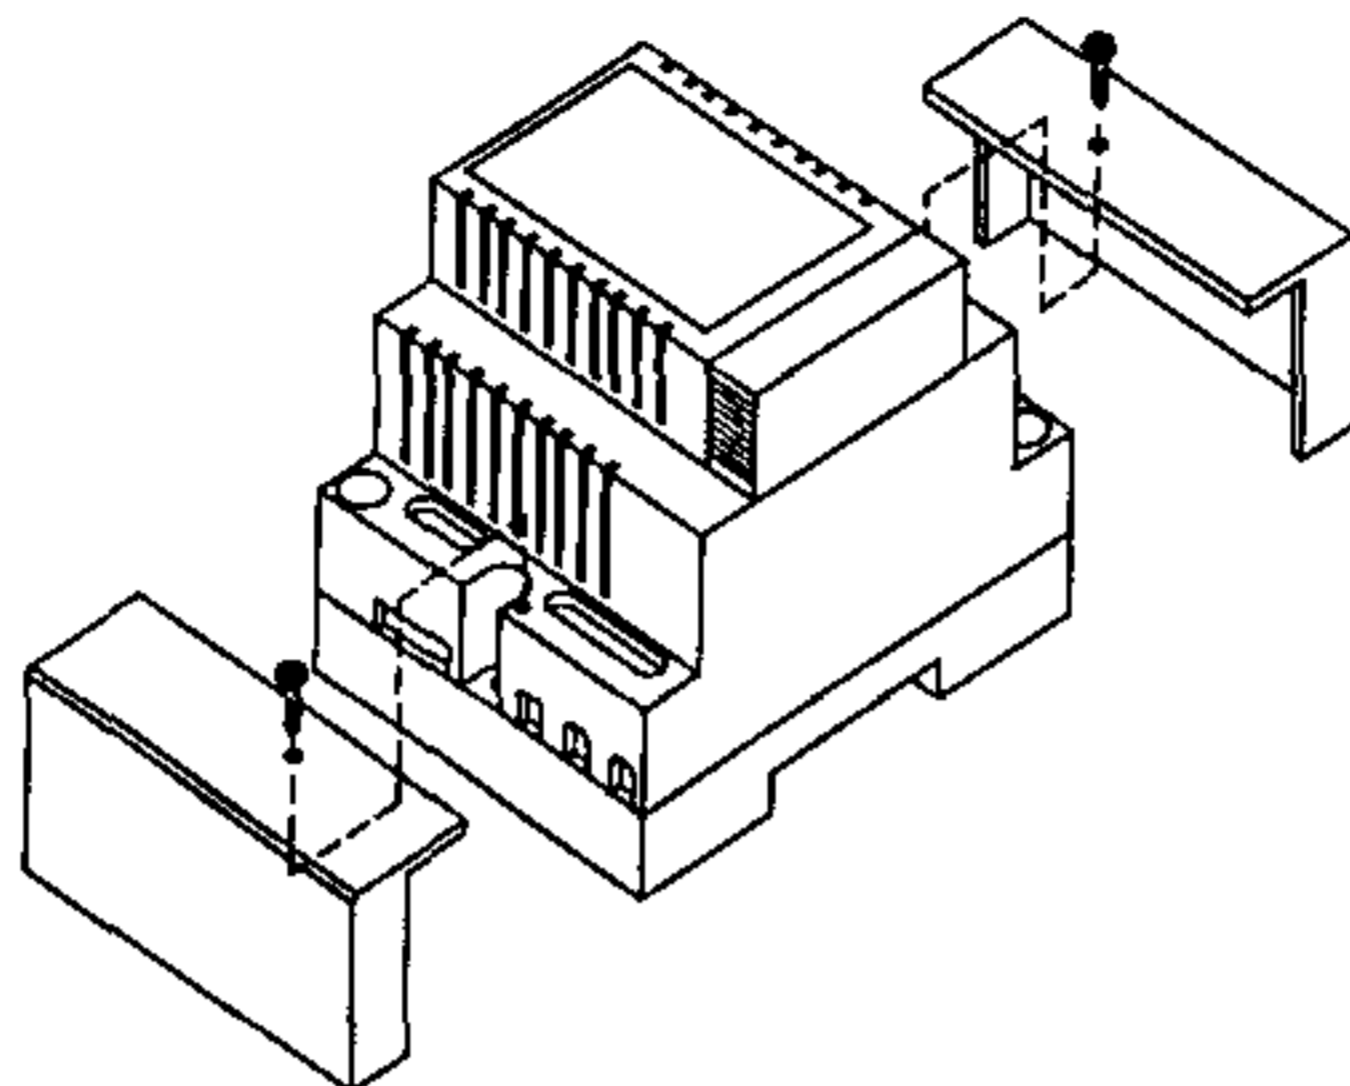

IMPORTANTE: Non ostruire le aperture di ventilazione. Cablare seguendo lo schema allegato. Prevedere un dispositivo per staccare l'alimentazione all'impianto. Non sostituire i fusibili con altri di tipo diverso.


IMPORTANT: Don't cover or obstruct any of the heatsink slots. Wire exactly as the enclosed diagram. Foresee a mains breaker circuit. Don't change fuses with different types or ratings.

IMPORTANT: Ne pas obstruer les ouvertures de ventilation. Cabler suivant le schema annexé. Prévoir un interrupteur pour couper le courant de l'installation. Ne pas remplacer les fusibles par d'autres de différente capacité.

IMPORTANTE: No obstruir las aperturas de ventilación. Cablear siguiendo el esquema adjunto. Prever un dispositivo para cortar la alimentación al sistema. No remplazar los fusibles con otros de tipo distinto.

INSTALLAZIONE / INSTALLATION / INSTALLATION / INSTALACIÓN

1) Pulsantiera / Door panel / Plaque de rue / Tarjeta externa

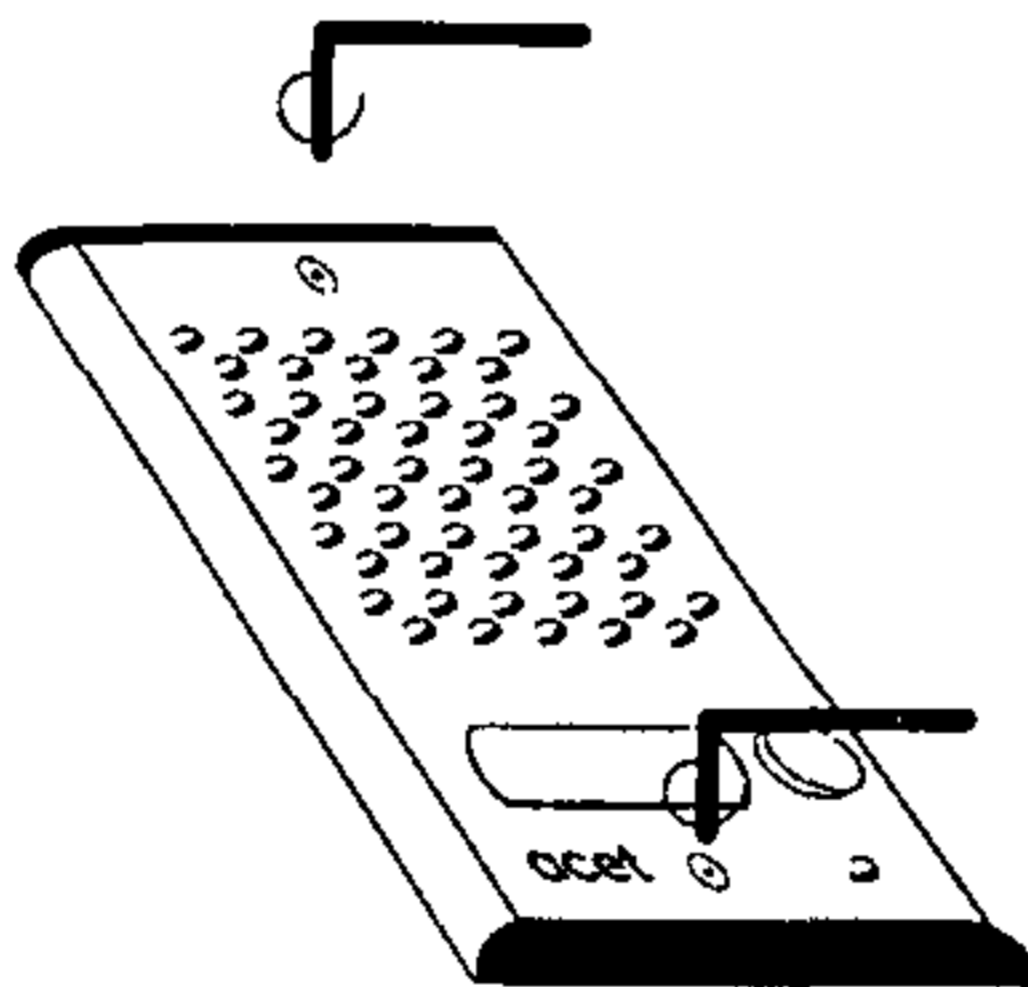


NOTA: In caso di montaggio ad incasso il frontale della scatola deve essere allineato alla parete.

NOTE: If flush mounted the front of the mounting box should be aligned with the wall.

NOTE: En cas de montage par encastré le côté frontal de la boîte doit être aligné au mur.

NOTA: En caso de empotrarse, el panel frontal de la caja ha de estar alineado con la pared.

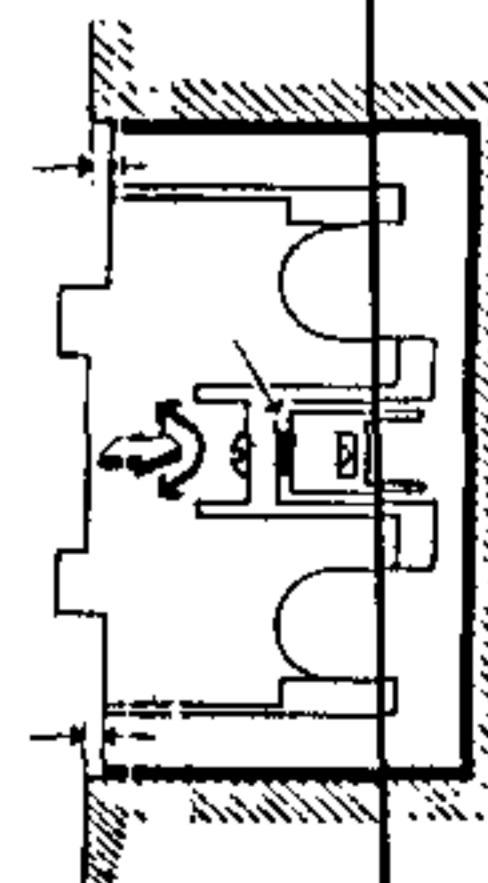

After removing the packing, check the integrity of the set. Packing components (plastic bags, expanded polystyrene etc.) are dangerous for children.

Installation must be carried out according to national safety regulations.

A safety switch, installed before the power supply is recommended.

Before connecting the set, ensure that the data on the label correspond to those of the network.

Use this set only for the purposes designed, i.e. for intercom systems. Any other use may be dangerous. The manufacturer is not responsible for damage caused by improper, erroneous or irrational use.

Before cleaning or maintenance, disconnect the set.

In case of failure or faulty operation, disconnect the set and do not open it. For repairs apply only to the technical assistance centre authorized by the manufacturer. Safety may be compromised if these instructions are disregarded.

Do not obstruct openings of ventilation/heat exit slots.

Installers must ensure that manuals with the above instructions are left on connected units after installation, for users' information.

All items must only be used for the purposes designated.

This manual must always be enclosed with the power supply.

ALIMENTATION POUR INSTALLATIONS DE PORTIERS ELECTRIQUES

CONSEILS POUR L'INSTALLATEUR

Lire attentivement les instructions contenues dans ce document puisqu'elles fournissent d'importantes indications concernant la sécurité pour l'installation, l'emploi et la maintenance.

Après avoir enlevé l'emballage s'assurer de l'intégrité de l'appareil. Les éléments de l'emballage (sachets en plastique, polystyrène, etc.) ne doivent pas être laissés à la portée des enfants, car ils peuvent être dangereux. L'exécution de l'installation doit être conforme aux normes nationales.

Il vaut mieux prévoir sur la ligne avant l'alimentation un interrupteur approprié de sectionnement et de protection.

Avant de connecter l'appareil s'assurer que les données reportées sur l'étiquette soient les mêmes que celles du réseau de distribution.

Cet appareil devra être destiné uniquement à l'emploi pour lequel il a été expressément conçu, c'est à dire pour l'alimentations des systèmes de portiers électriques. Tout autre emploi doit être considéré impropre et donc dangereux.

Le constructeur ne peut pas être considéré responsable pour d'éventuels dommages résultant de l'emploi impropre, erroné et déraisonnable.

Avant d'effectuer n'importe quelle opération de nettoyage ou de maintenance, débrancher l'appareil du réseau d'alimentation électrique, en éteignant l'interrupteur de l'installation.

En cas de panne et/ou de mauvais fonctionnement de l'appareil, enlever l'alimentation au moyen de l'interrupteur et ne pas le modifier. Pour une éventuelle réparation s'adresser uniquement à un centre d'assistance technique autorisé par le constructeur. Si on ne respecte pas les instructions mentionnées ci-dessus on peut compromettre la sécurité de l'appareil.

Ne pas obstruer les ouvertures et les fentes de ventilation ou de refroidissement.

L'installateur doit s'assurer que les renseignements pour l'utilisateur soient présents dans les appareils connectés.

Tous les appareils constituant l'installation doivent être destinés exclusivement à l'emploi pour lequel ils ont été conçus.

Ce document devra être toujours joint avec l'alimentation.

ALIMENTADORES PARA INSTALACIONES DE PORTERO ELECTRICO

CONSEJOS PARA EL INSTALADOR

Leer atentamente los consejos contenidos en el presente documento en cuanto dan importantes indicaciones concernientes la seguridad de la instalación, del uso y de la manutención.

Después de haber quitado el embalaje asegurarse de la integridad del aparato. Los elementos del embalaje (boisos de plastico etc.) no tienen que ser dejados al alcance de los niños en cuanto posibles fuentes de peligro. La ejecución de la instalación, debe respetar las normas en vigor.

Es oportuno prever antes del alimentador un interruptor apropiado de seccionamiento y protección.

Antes de conectar el aparato asegurarse que los datos de la placa sean iguales a los de la red de distribución.

Este aparato tendrá que ser destinado solamente al uso para el cual fue expresamente concebido, es decir para alimentación de sistemas de porteros eléctricos. Los otros usos deben ser considerados improprios y por lo tanto peligrosos. El constructor no puede ser considerado responsable de eventuales daños causados por usos improprios erróneos e irrazonables.

Antes de efectuar cualquiera operación de limpieza o de manutención, desconectar el aparato de la red de alimentación eléctrica, apagando el interruptor de la instalación.

En caso de daño y/o de malo funcionamiento del aparato, quitar la alimentación por medio del interruptor y no manipularlo. Para eventuales reparaciones recurrir solamente a un centro de asistencia técnica autorizado por el constructor. La falta de respecto a lo anteriormente expuesto puede comprometer la seguridad del aparato.

No obstruir las aberturas o hendiduras de ventilación o de salida calor.

El instalador debe asegurarse que las informaciones para el usuario sean presentes en los aparatos derivados.

Todos los aparatos que constituyen la instalación deben ser destinados exclusivamente al uso para el qual fueron concebidos.

Este documento tendrá que ser siempre adjuntado al alimentador.





P1 REGOLAZIONE ALTOPARLANTE
ADJUSTMENT SPEAKER VOLUME
REGLAGE HAUT-PARLEUR
AMPLIFICACION ALTAVOZ

P2 REGOLAZIONE MICROFONO
ADJUSTMENT MICROPHONE
REGLAGE MICRO
AMPLIFICACION MICROFONO

CITOFONO 1
TELEPHONE 1
COMBINE 1
HAUSTELEFON 1
TELEFONO 1

CITOFONO 2
TELEPHONE 2
COMBINE 2
HAUSTELEFON 2
TELEFONO 2


CITOFONO n
TELEPHONE n
COMBINE n
HAUSTELEFON n
TELEFONO n

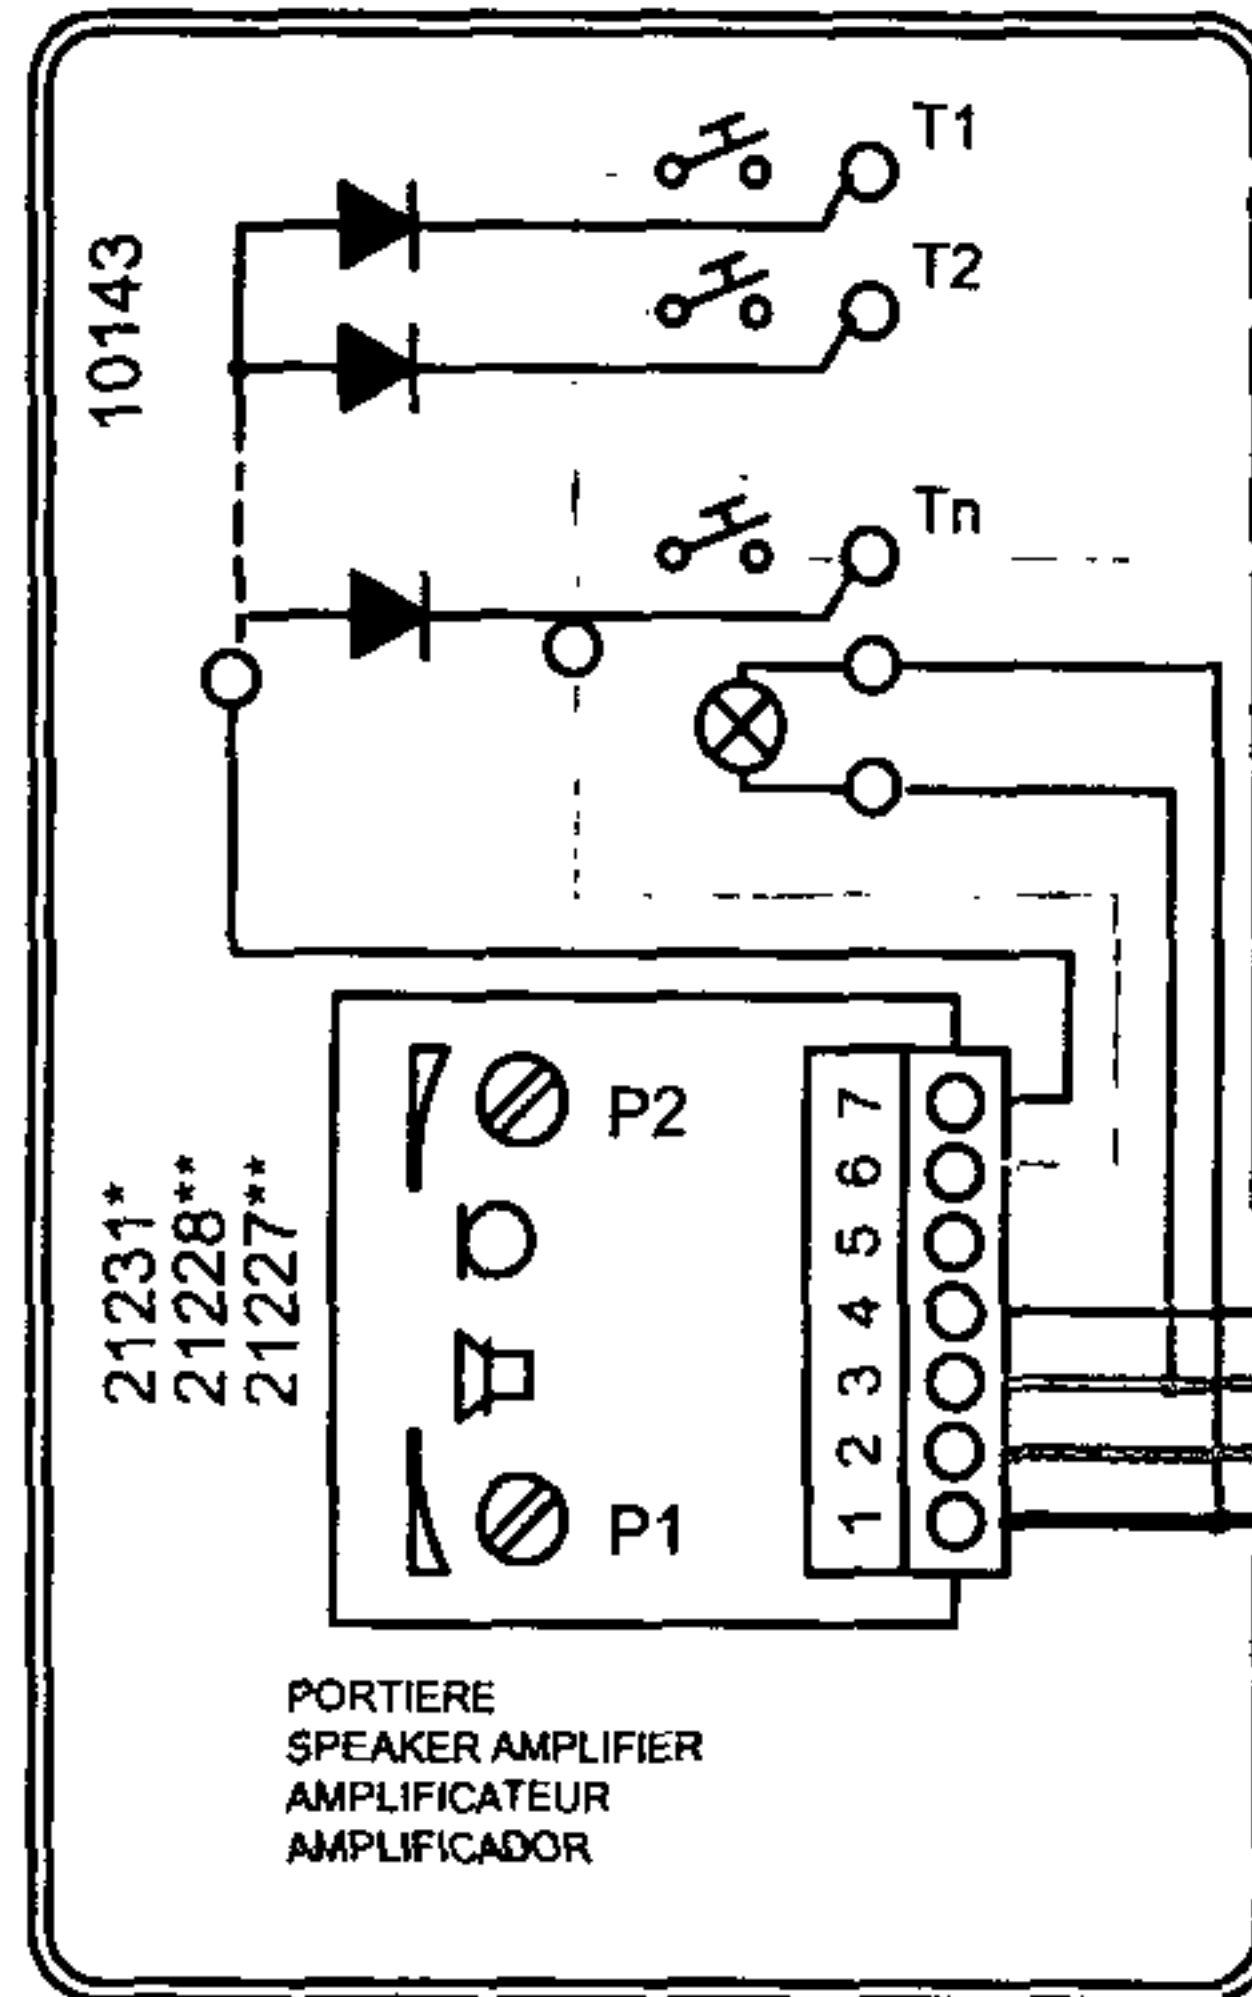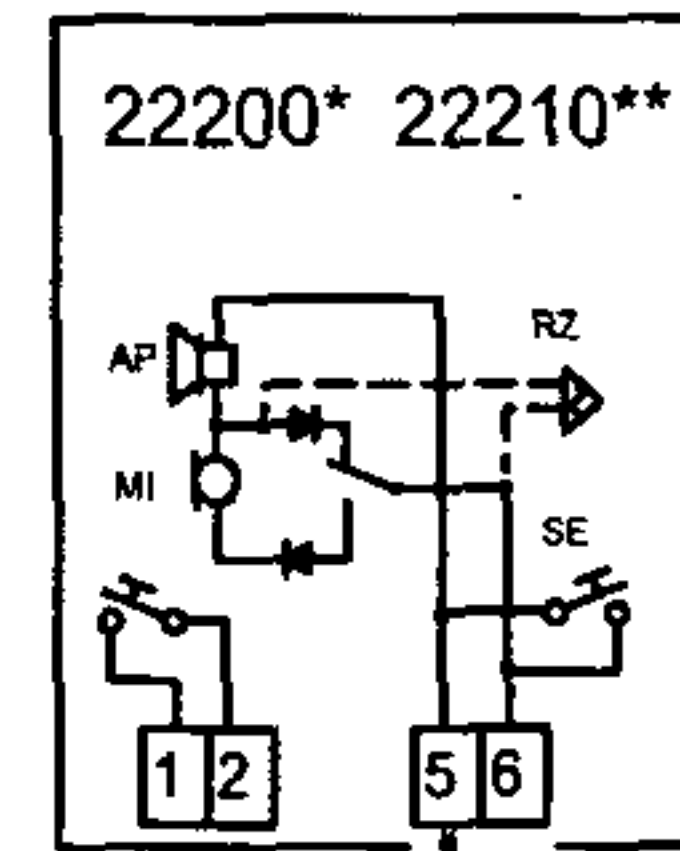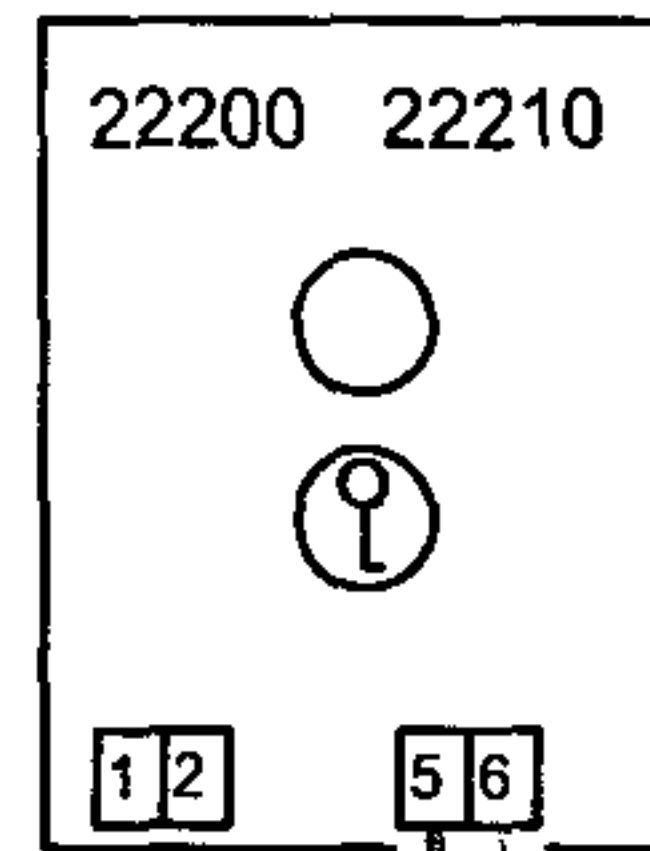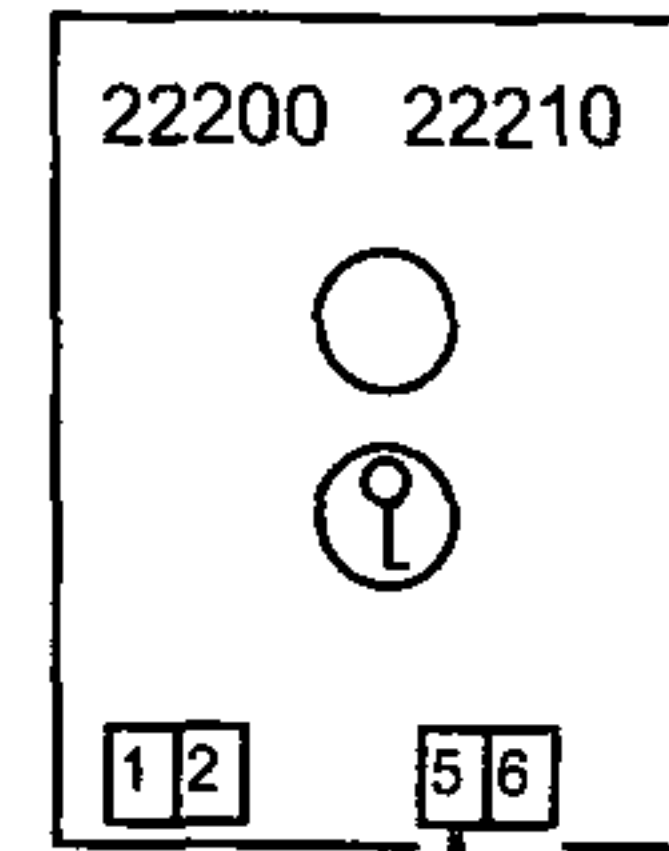

PULSANTIERA n TASTI
PUSH n BUTTONS
PLAQUE DE RUE n BOUTONS
PLACA n PULSADORES

SERRATURA ELETTRICA
ELECTRIC LOCK
GACHE ELECTRIQUE
ABREPUERTA ELECTRICO

TASTO APRIPORTA DIRETTO
DIRECT OPENER BUTTON
BOUTON OUVRE-PORTE DIRECT
PULSADOR ABREPUERTA DIRECTO

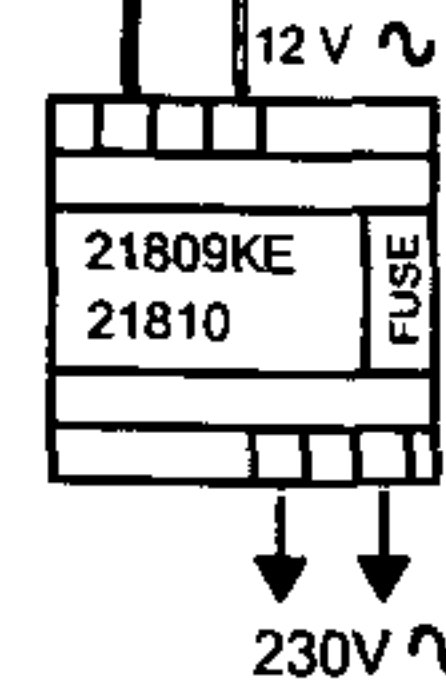

* CHIAMATA RONZATORE
BUZZER CALL
APPEL RONFLEUR
LLAMADA ZUMBADOR

** CHIAMATA BITONO
DUAL-TONE CALL
APPEL MODULEE
LLAMADA BITONAL

MI MICROFONO
MICROPHONE
MICROPHONE
MICROFONO

AP ALTOPARLANTE
HAUT-PARLEUR
LOUD-SPEAKER
ALTAVOZ

RZ RONZATORE
BUZZER
RONFLEUR
ZUMBADOR

SE APRIPORTA
OPENER DOOR
OUVRE-PORTE
ABREPUERTA

- IMPIANTO CITOFONICO SISTEMA A 2 FILI
- 2 WIRES DOORPHONE-ENTRY SYSTEM
- INSTALLATION PARLEPHONE SYSTEME 2 FILS
- INSTALACION TELEFONO SISTEMA 2 HILOS

ACET

EASYKIT
662XX

P.1
ADJUSTMENT LAUDSPEAKER VOLUME
REGLAGE HAUT-PARLEUR
AMPLIFICACION ALTA VOZ
REGOLAZIONE ALTOPARLANTE



P.2
ADJUSTMENT MICROPHONE
REGLAGE MICRO
AMPLIFICACION MICROFONO
REGOLAZIONE MICROFONO

PUSH BUTTON PANEL n BUTTONS
PLAQUE DE RUE n BOUTONS
PLACA n PULSADORES
PULSANTIERA n TASTI

TELEPHONE 1
COMBINE' 1
TELEFONO 1
CITOFONO 1

TELEPHONE 2
COMBINE' 2
TELEFONO 2
CITOFONO 2

TELEPHONE n
COMBINE' n
TELEFONO n
CITOFONO n

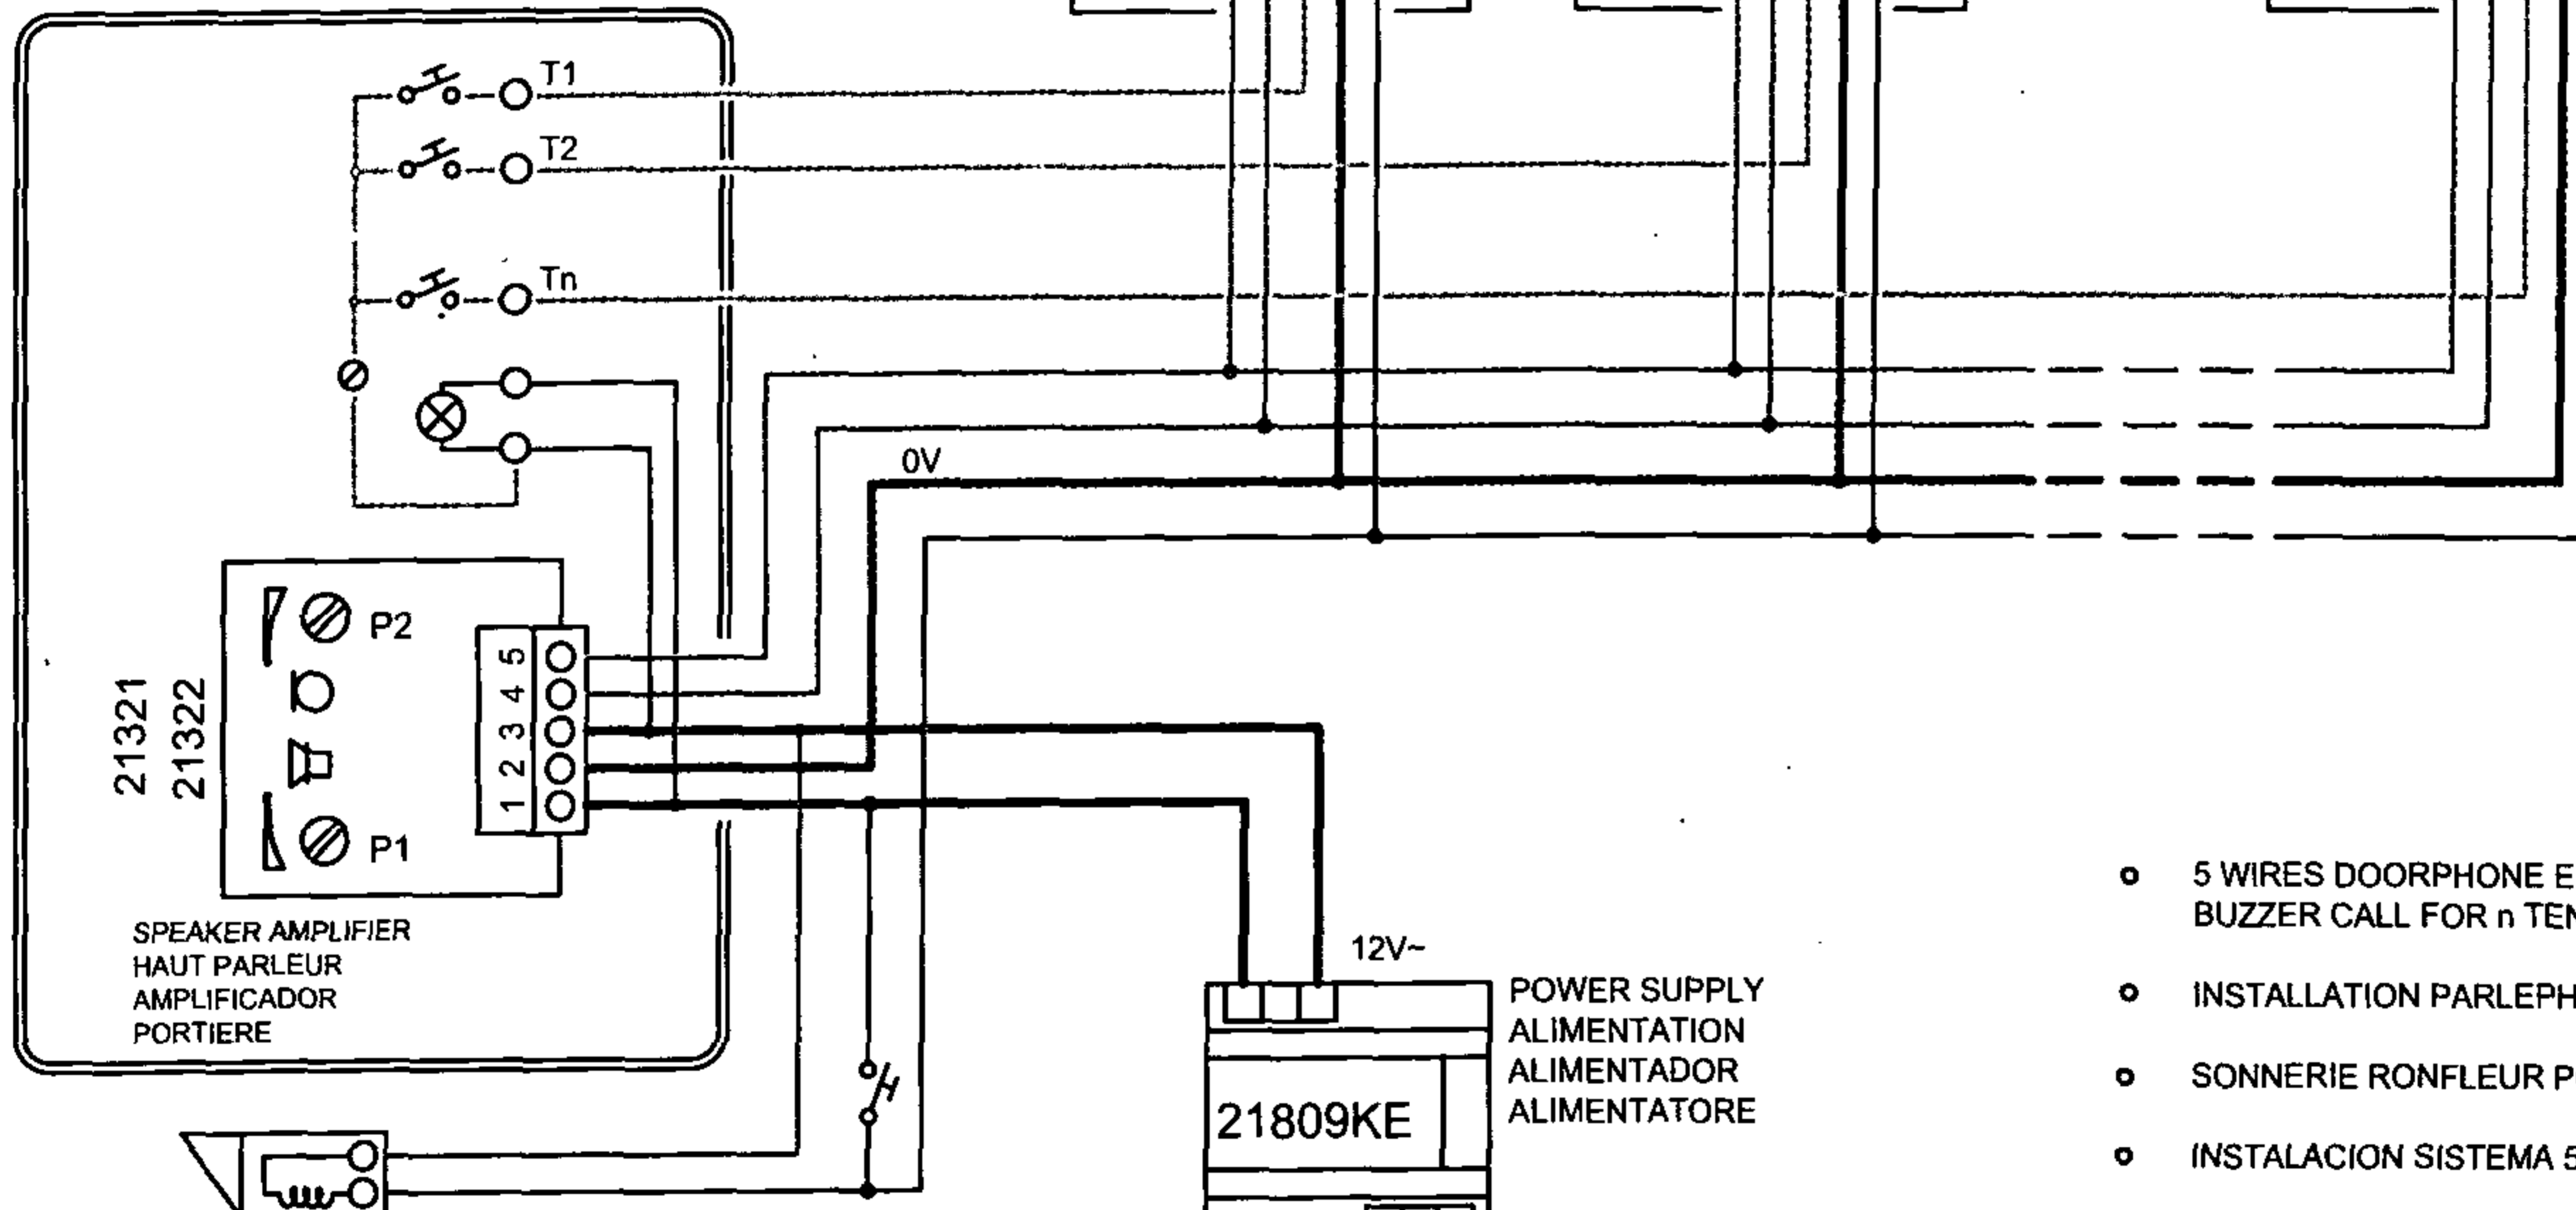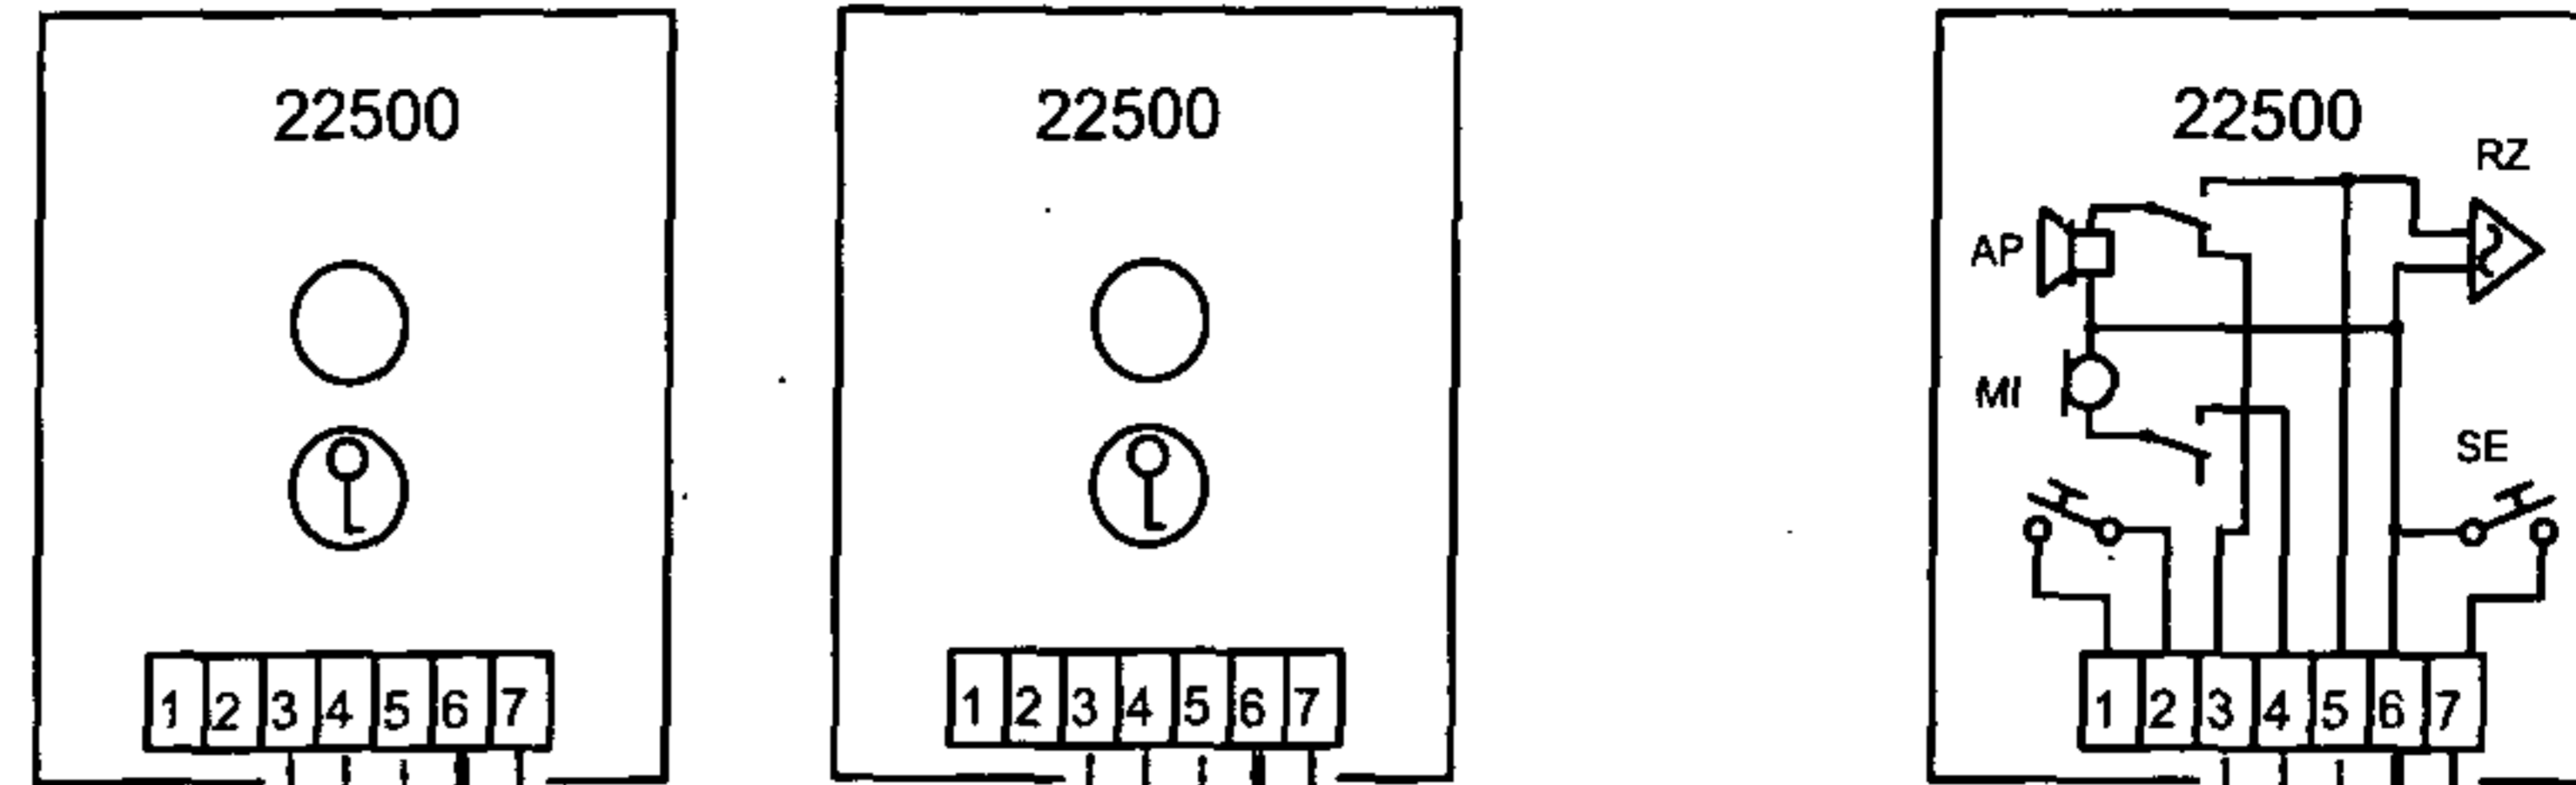

MI MICROFONO
MICROPHONE
MICROPHONE
MICROFONO

AP ALTOPARLANTE
HAUT-PARLEUR
LOUD-SPEAKER
ALTA VOZ


RZ RONZATORE
BUZZER
RONFLEUR
ZUMBADOR

SE APRIPORTA
OPENER DOOR
OUVRE-PORTE
ABREPUERTA

- 5 WIRES DOORPHONE ENTRY SYSTEM
BUZZER CALL FOR n TENANTS
- INSTALLATION PARLEPHONE AVEC 5 FILS
- SONNERIE RONFLEUR POUR n USAGER
- INSTALACION SISTEMA 5 HILOS
- IMPIANTO CITOFONICO A 5 FILI
CHIAMATA RONZATORE PER n UTENTI

ELECTRIC LOCK
GACHE ELECTRIQUE
ABREPUERTA ELECTRICO
SERRATURA ELETTRICA

DIRECT OPENER DOOR BUTTON
BOUTON OUVRE PORTE DIRECT
PULSADOR ABREPUERTA DIRECTO
TASTO APRIPORTA DIRETTO

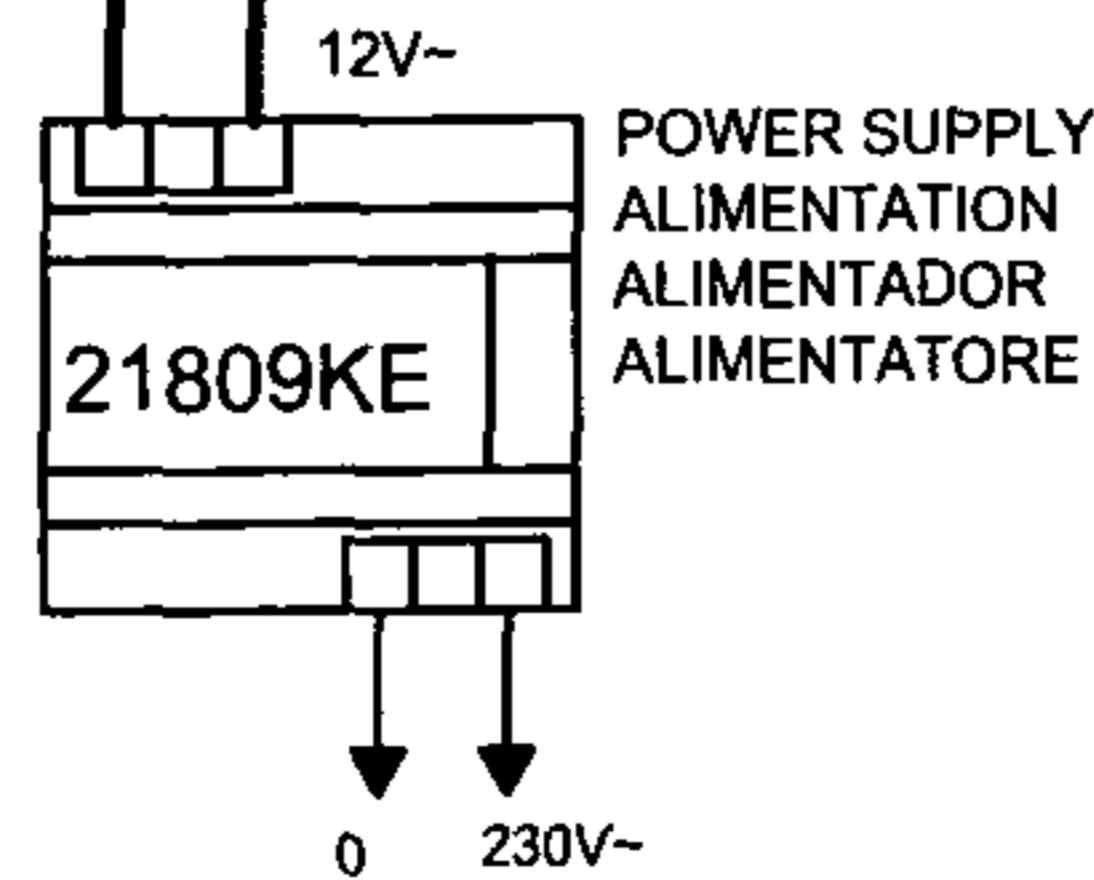

ACET

EASYKIT
6650X

**TABELLA RELAZIONE LUNGHEZZA E SEZIONE DEI CAVI
TABLE SHOWING SIZE OF CABLES FOR LENGTH OF RUN
CARACTERISTIQUE DES CABLES: SECTION ET LONGEUR
TABLAS DE CABLEADOS Y SU SECCIONES**

**TRA ALIMENTATORE E PORTIERE / BETWEEN POWER SUPPLY AND SPEAKER AMPLIFIER
ENTRE ALIMENTATION ET AMPLI / ENTRE ALIMENTADOR Y PORTERO**

Distanza – Distance Distance -Longitud de los cables (m.)	8	16	24	40
Sezione filo - Section of Wire Section du fils - Secciones de los cables (mmq.)	0,5	1	1,5	3
Diametro filo - Diameter of Wire Diametre du fils - Diametro de los cables (mm.)	0,8	1,16	1,38	1,95
Verificare che la tensione al posto esterno sia di almeno 12V AC Please verify the tension on speaker amplifier of 12V AC Verifiè la tension au ampli 12V AC				

**TRA POSTO ESTERNO E CITOFONO / BETWEEN TELEPHONE AND SPEAKER AMPLIFIER
ENTRE AMPLI' ET COMBINE' / ENTRE PORTERO Y TELEFONO**

Distanza – Distance Distance -Longitud de los cables (m.)	30	70	200	400
Sezione filo - Section of Wire Section du fils - Secciones de los cables (mmq.)	0,28	0,5	1	1,5
Diametro filo - Diameter of Wire Diametre du fils - Diametro de los cables (mm.)	0,6	0,8	1,16	1,38

**ALIMENTATORI PER IMPIANTI DI CITOFONIA
AVVERTENZE PER CHI INSTALLA**

Leggere attentamente le avvertenze contenute nel presente documento in quanto forniscono importanti indicazioni riguardanti la sicurezza di installazione, d'uso e manutenzione.

Dopo aver tolto l'imballaggio assicurarsi dell'integrità dell'apparecchio.

Gli elementi dell'imballaggio (sacchetti di plastica, polistirolo espanso, ecc.) non devono essere lasciati alla portata dei bambini in quanto potenziali fonti di pericolo. L'esecuzione dell'impianto deve essere rispondente alle norme CEI vigenti.

È opportuno prevedere a monte dell'alimentazione un appropriato interruttore di sezionamento e protezione.

Prima di collegare l'apparecchio accertarsi che i dati di targa siano rispondenti a quelli della rete di distribuzione.

Questo apparecchio dovrà essere destinato solo all'uso per il quale è stato espressamente concepito, e cioè per sistemi di citofonia. Ogni altro uso è da considerarsi improprio e quindi pericoloso. Il costruttore non può essere considerato responsabile per eventuali danni derivanti da usi impropri, erronei ed irragionevoli.

Prima di effettuare qualsiasi operazione di pulizia o manutenzione, disinserire l'apparecchio dalla rete di alimentazione elettrica, spegnendo l'interruttore dell'impianto.

In caso di guasto e/o cattivo funzionamento dell'apparecchio, togliere l'alimentazione mediante l'interruttore e non manometterlo. Per l'eventuale riparazione rivolgersi solamente ad un centro di assistenza tecnica autorizzato dal costruttore. Il mancato rispetto di quanto sopra può compromettere la sicurezza dell'apparecchio.

Non ostruite le aperture o fessure di ventilazione o di smaltimento calore.

L'installatore deve assicurarsi che le informazioni per l'utente siano presenti sugli apparecchi derivanti.

Tutti gli apparecchi costituenti l'impianto devono essere destinati esclusivamente per l'uso per cui sono stati concepiti.

Questo documento dovrà sempre rimanere allegato all'alimentatore.


**POWER SUPPLIES FOR ELECTRIC DOOR-OPENER SYSTEMS
SAFETY INSTRUCTIONS FOR INSTALLERS**

Carefully read the instructions on this manual: they give important information on the safety, use and maintenance of the installation.


3) Citofono / Doorphone / Poste / Teléfono

A OPEN THE BASE
OVERTURE DU SOCLE
APERTURA ZOCCOLO

SCREWDRIVER OF 3 OR 3.5 mm
TOURNEVIS DE 3 OU 3.5 mm
CACCIAVITE DI 3 O 3.5 mm

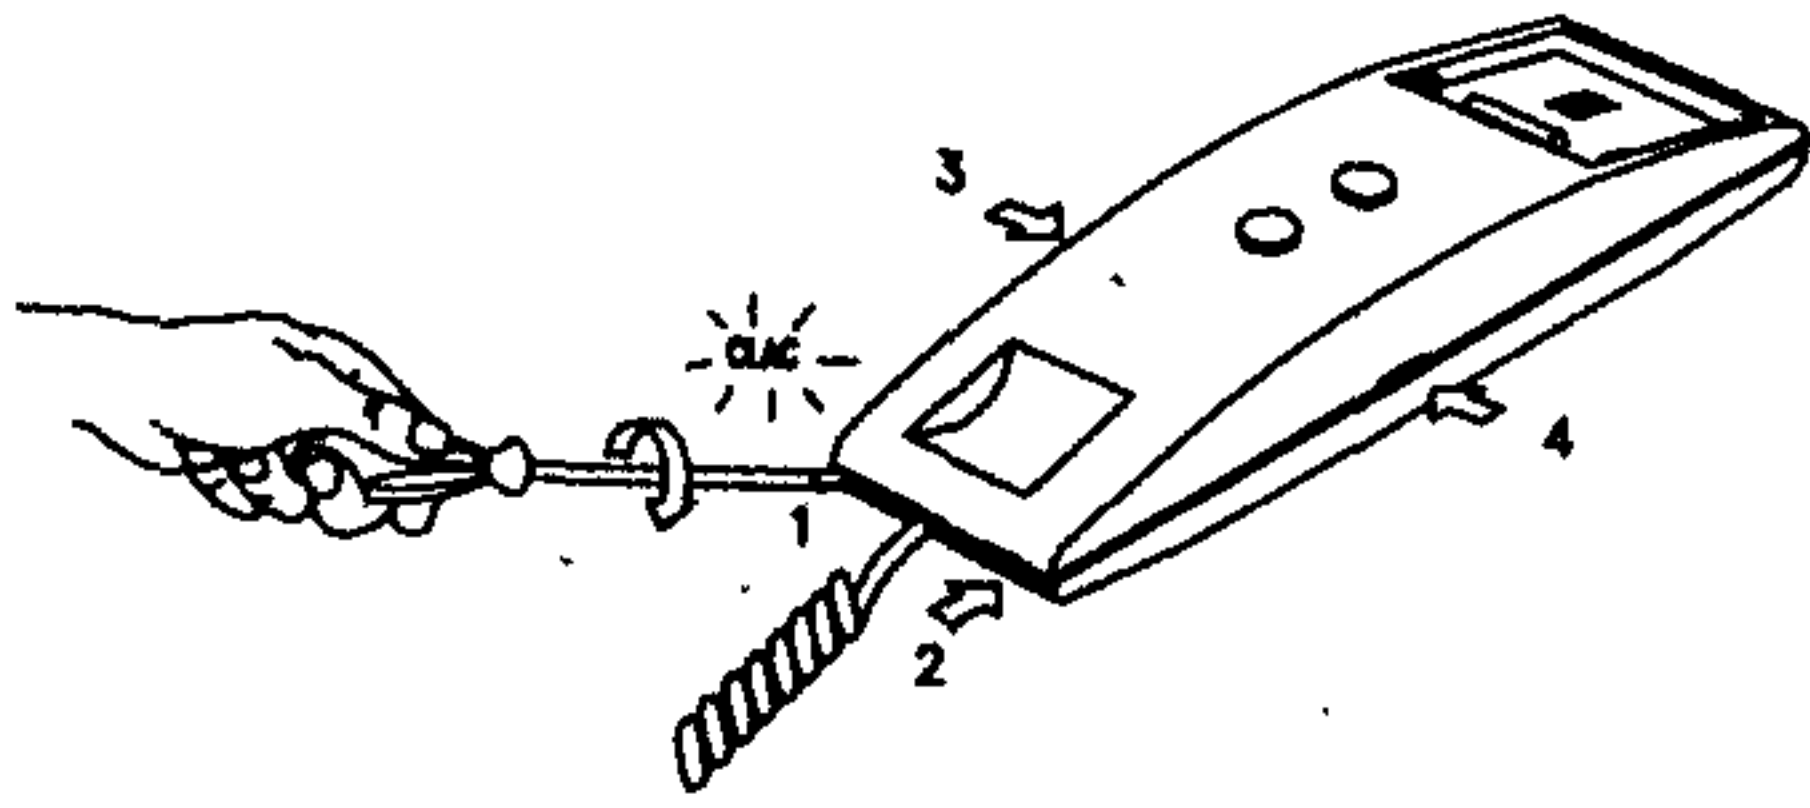


C CLOSE THE BASE
FERMETURE DU SOCLE
CHIUSURA BASE CITOFONO

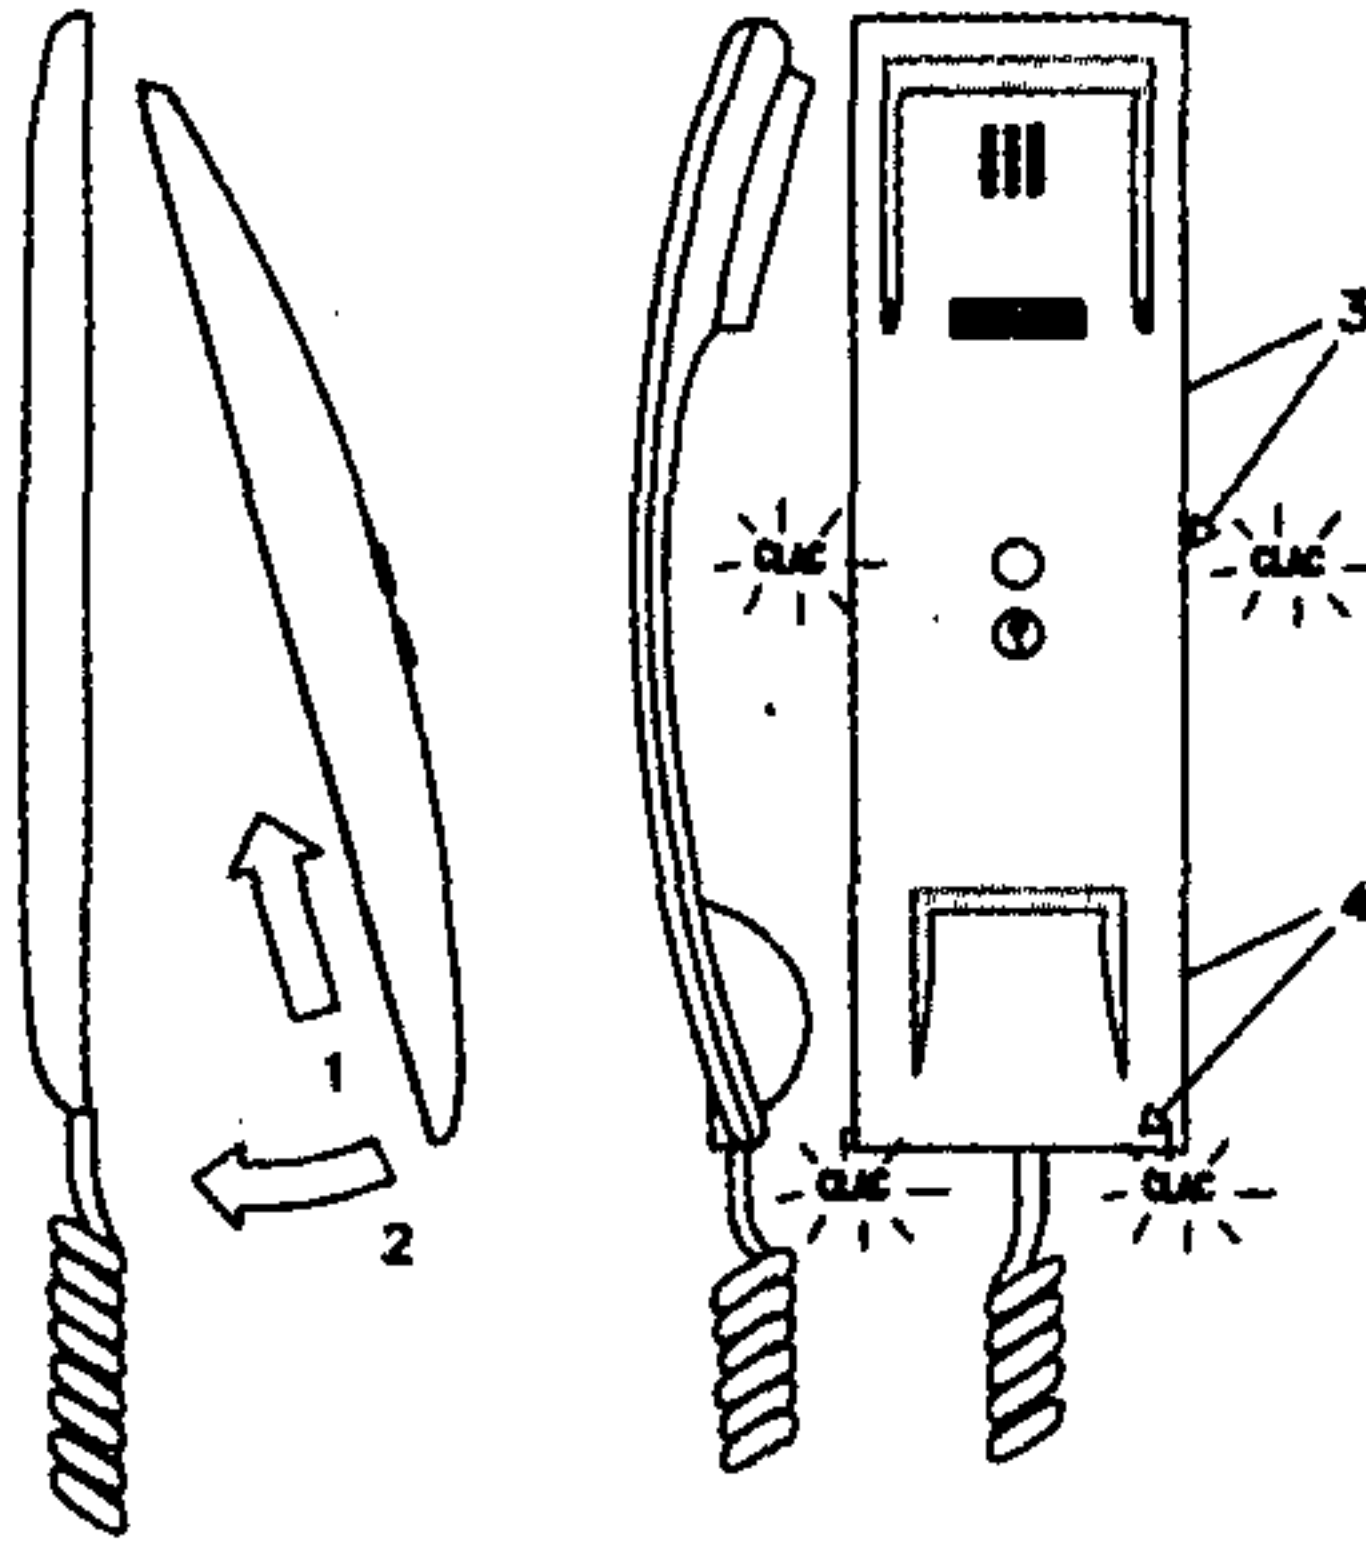


B FIXING AND CONNECTION
FIXATION ET
RACCORDMENT
FISSAGGIO E
COLLEGAMENTO

FIXING POINTS
POINTS DE
FIXATION
PUNTI DI
FISSAGGIO


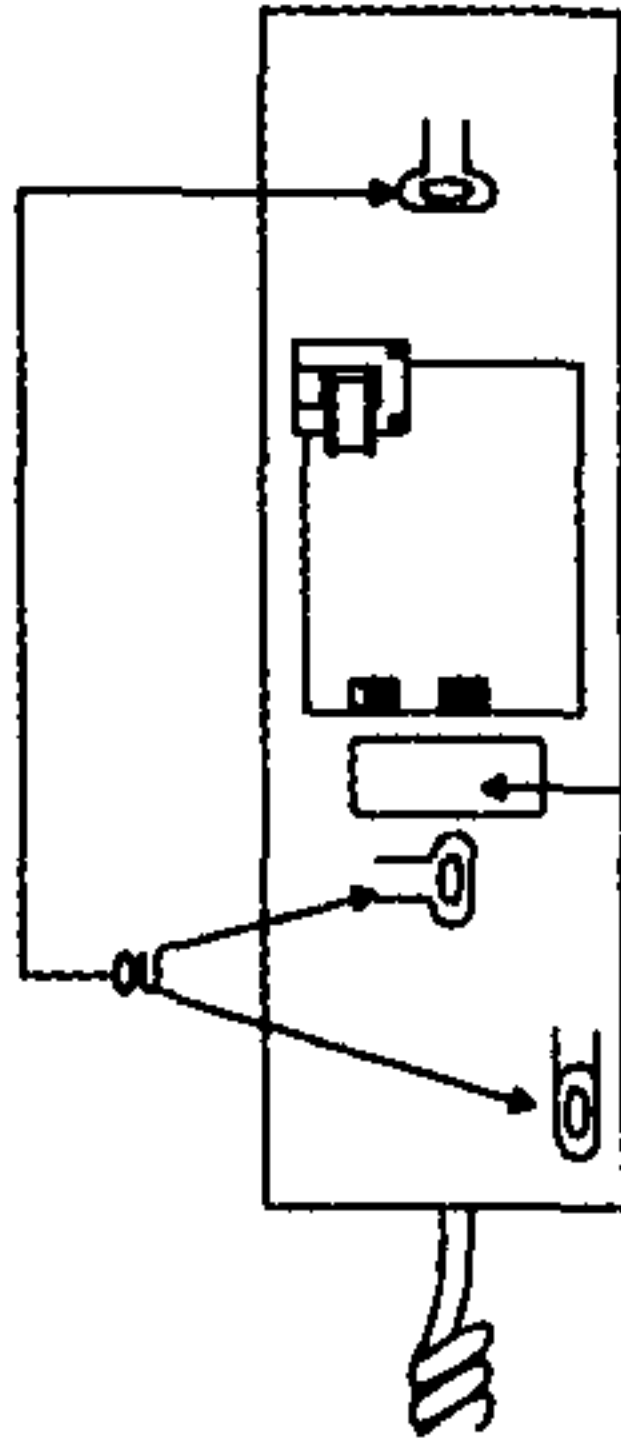


WIRE ENTRY
ENTREE DE CABLE
ENTRATA DEL CAVO




IMPORTANTE: Prestare attenzione alla corretta posizione del pedale di comando.
IMPORTANT: Pay attention to the correct position of the hook command lever.
IMPORTANT: La pedale doit être bien placée avant de fermer le coffre.
IMPORTANTE: Prestar atención a la correcta posición del pedal de comando.

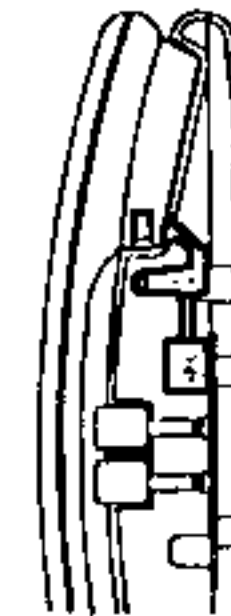


USO / OPERATION / MODE D'EMPLOI / USO

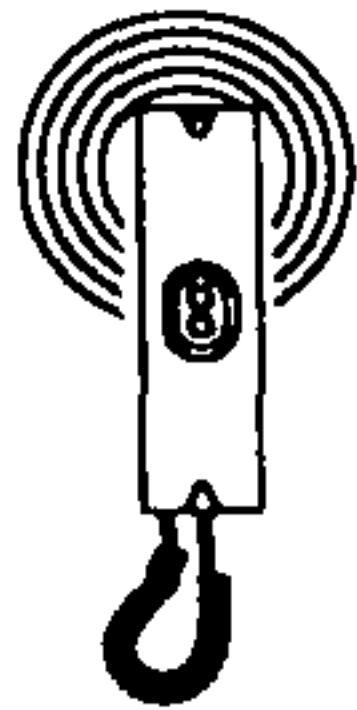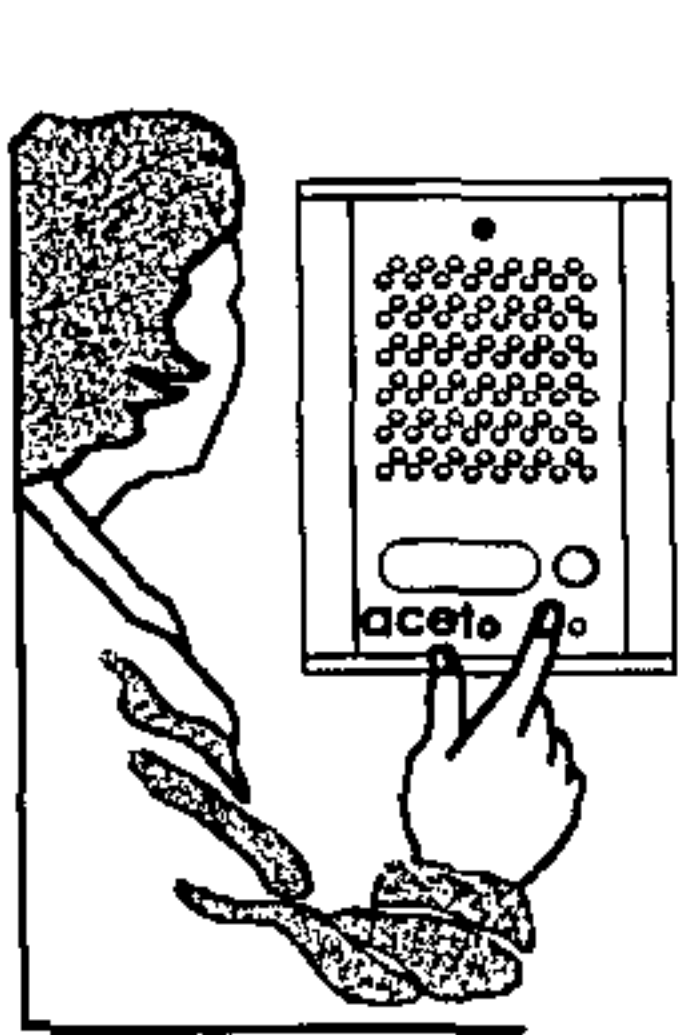


Chiamata
Call
Appel
Llamada

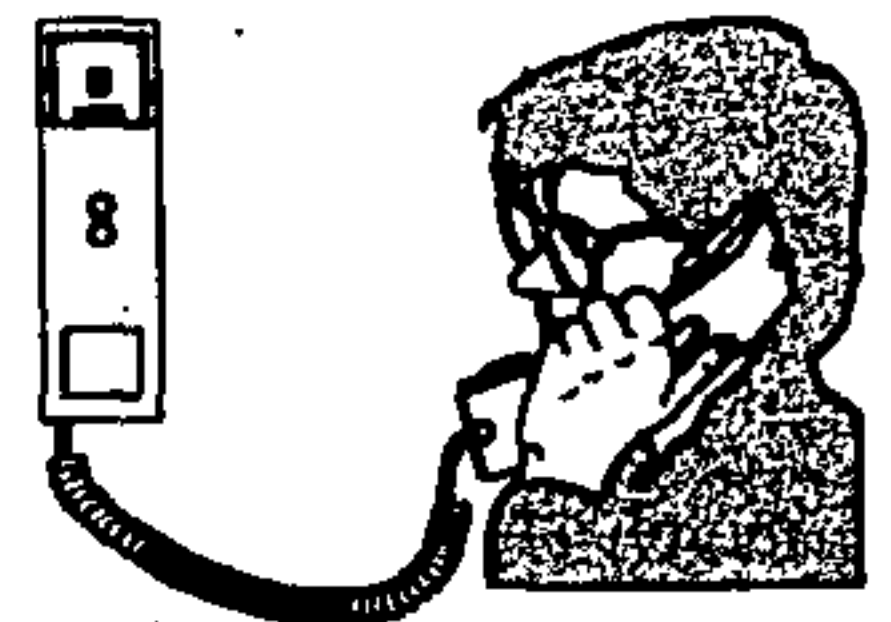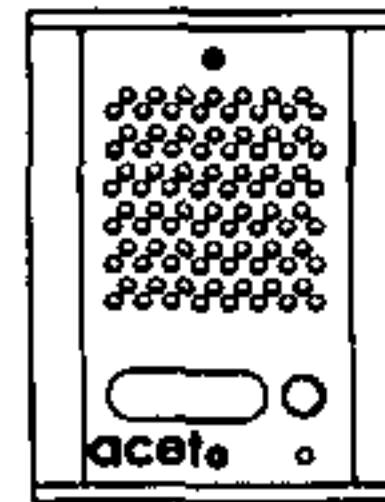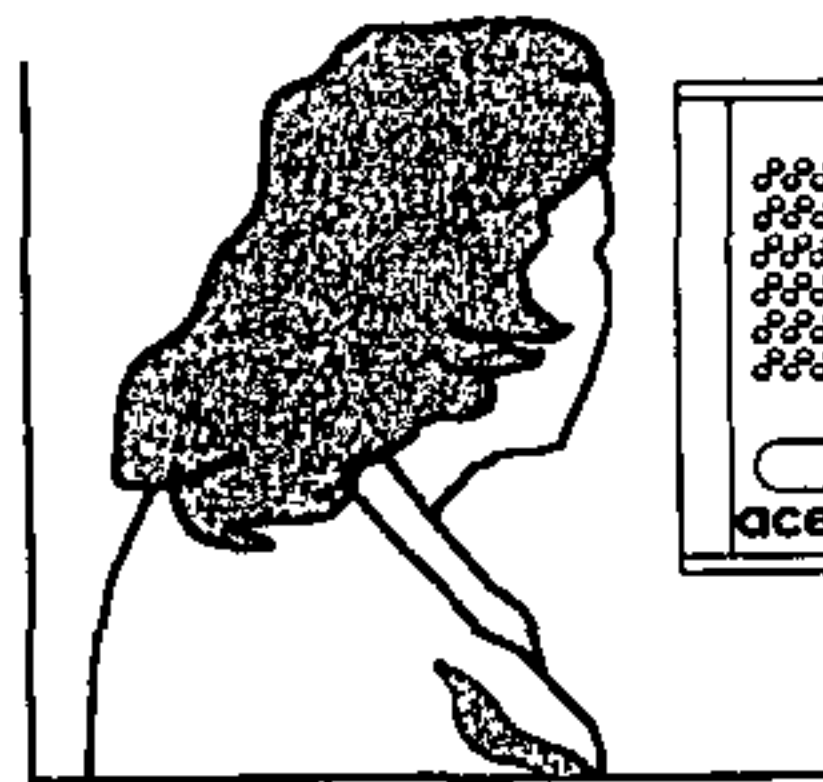

Risposta
Answer
Réponse
Respuesta

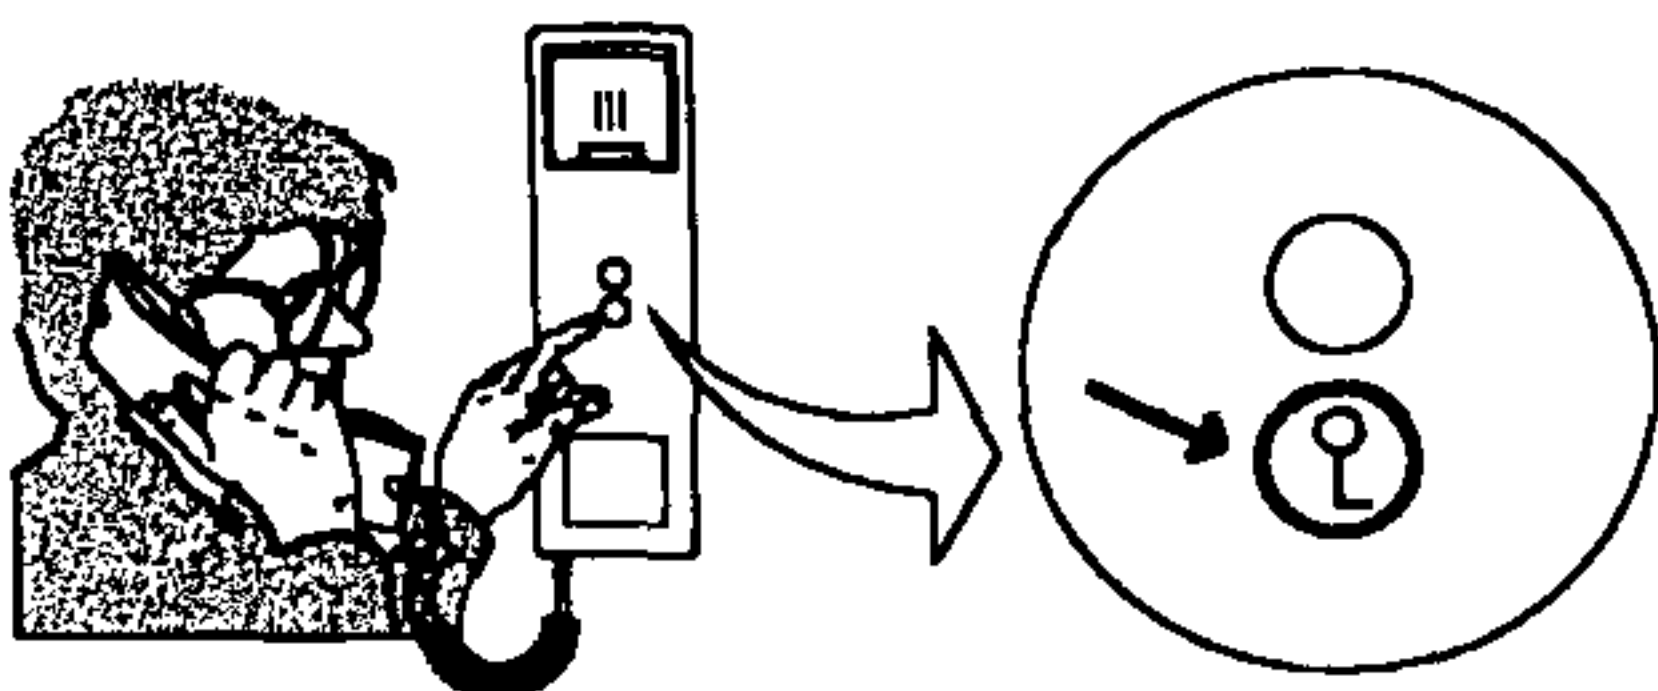

Apertura porta
Door opening
Ouvreporte
Abertura puerta

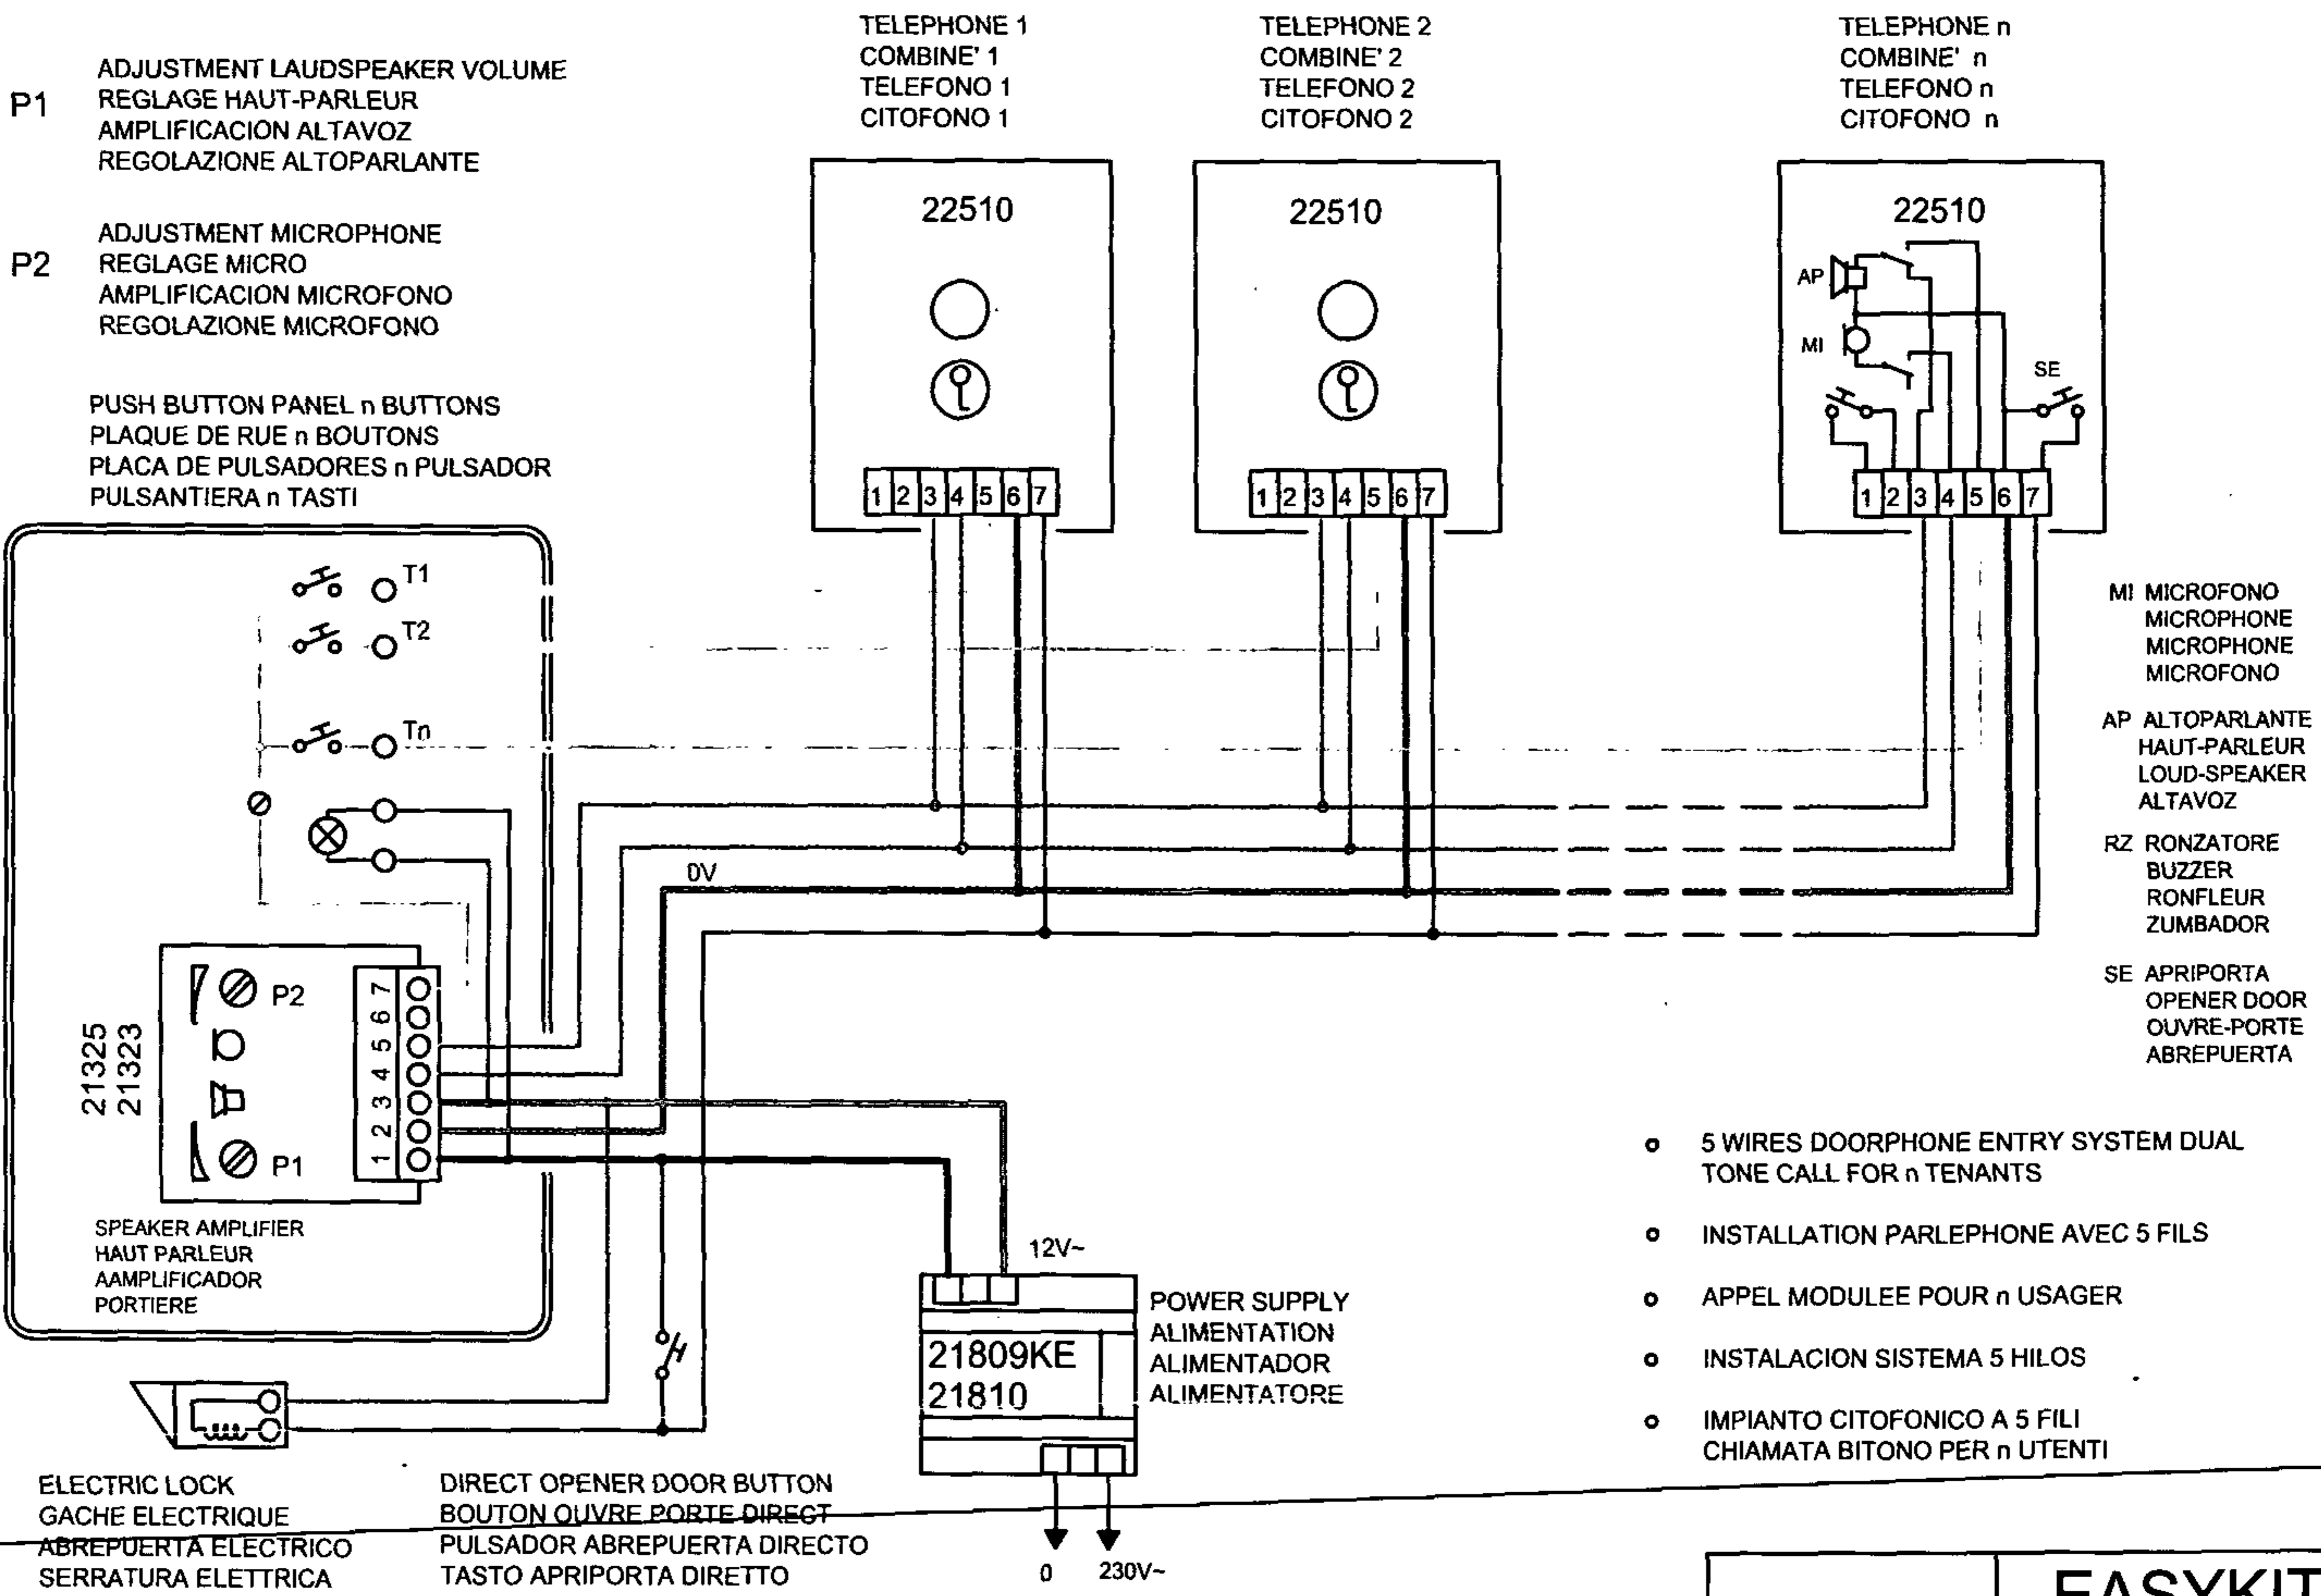

- 5 WIRES DOORPHONE ENTRY SYSTEM DUAL TONE CALL FOR n TENANTS
- INSTALLATION PARLEPHONE AVEC 5 FILS
- APPEL MODULEE POUR n USAGER
- INSTALACION SISTEMA 5 HILOS
- IMPIANTO CITOFONICO A 5 FILI CHIAMATA BITONO PER n UTENTI


ACET **EASYKIT 6656X**

TEL: 01934 744111


FAX: 01934 744304
TYPICAL QUESTIONS

TATE


2-WIRE DOOR ENTRY SCHEMATIC

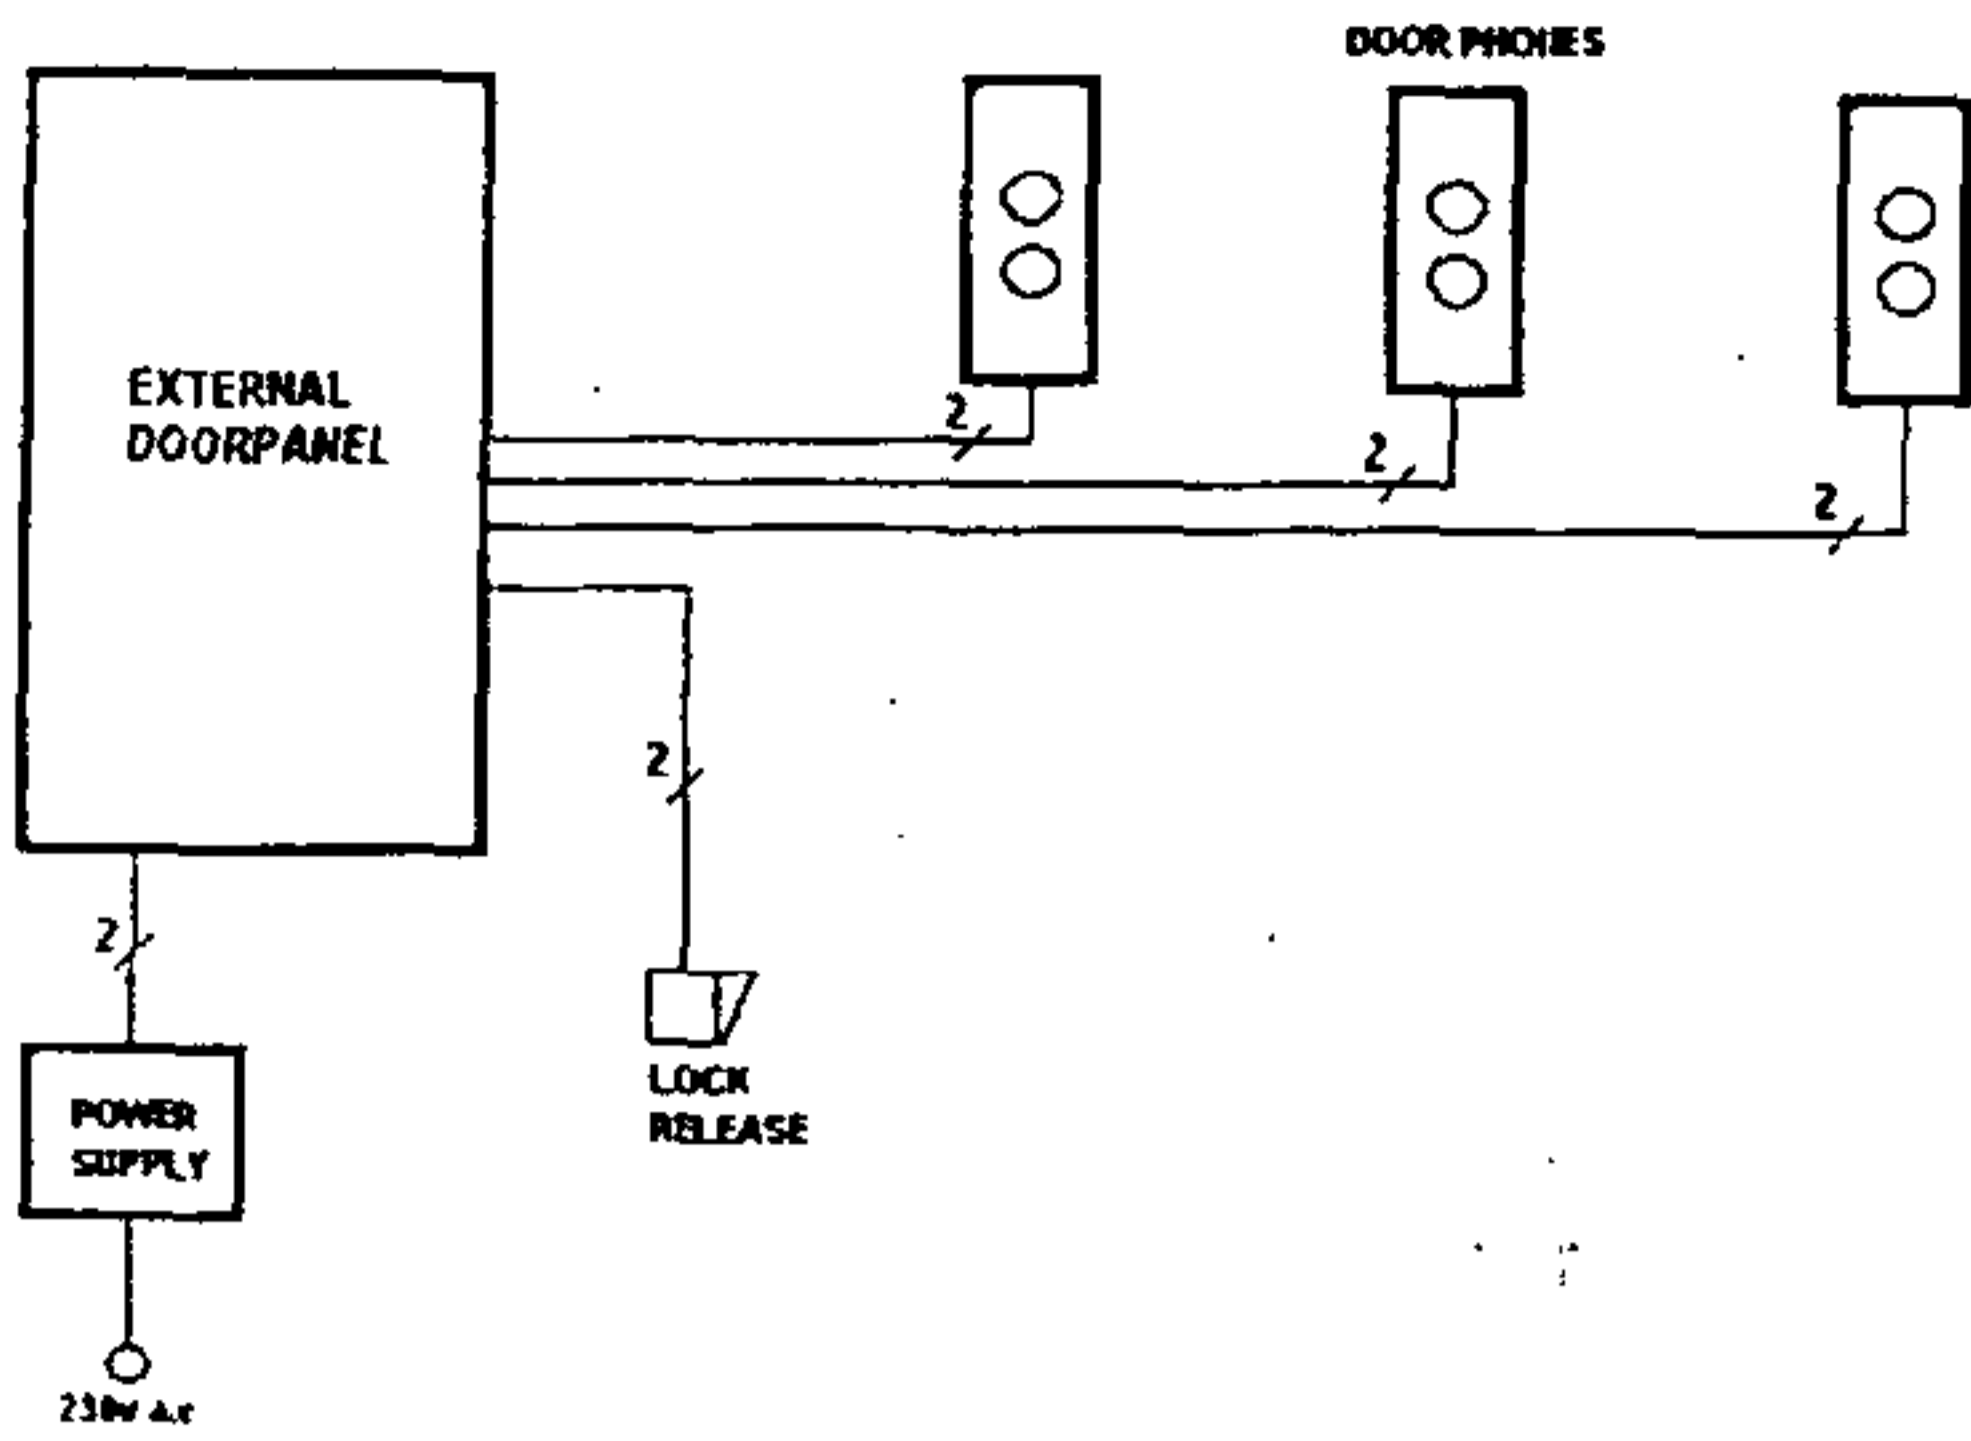

5-WIRE DOOR ENTRY SCHEMATIC

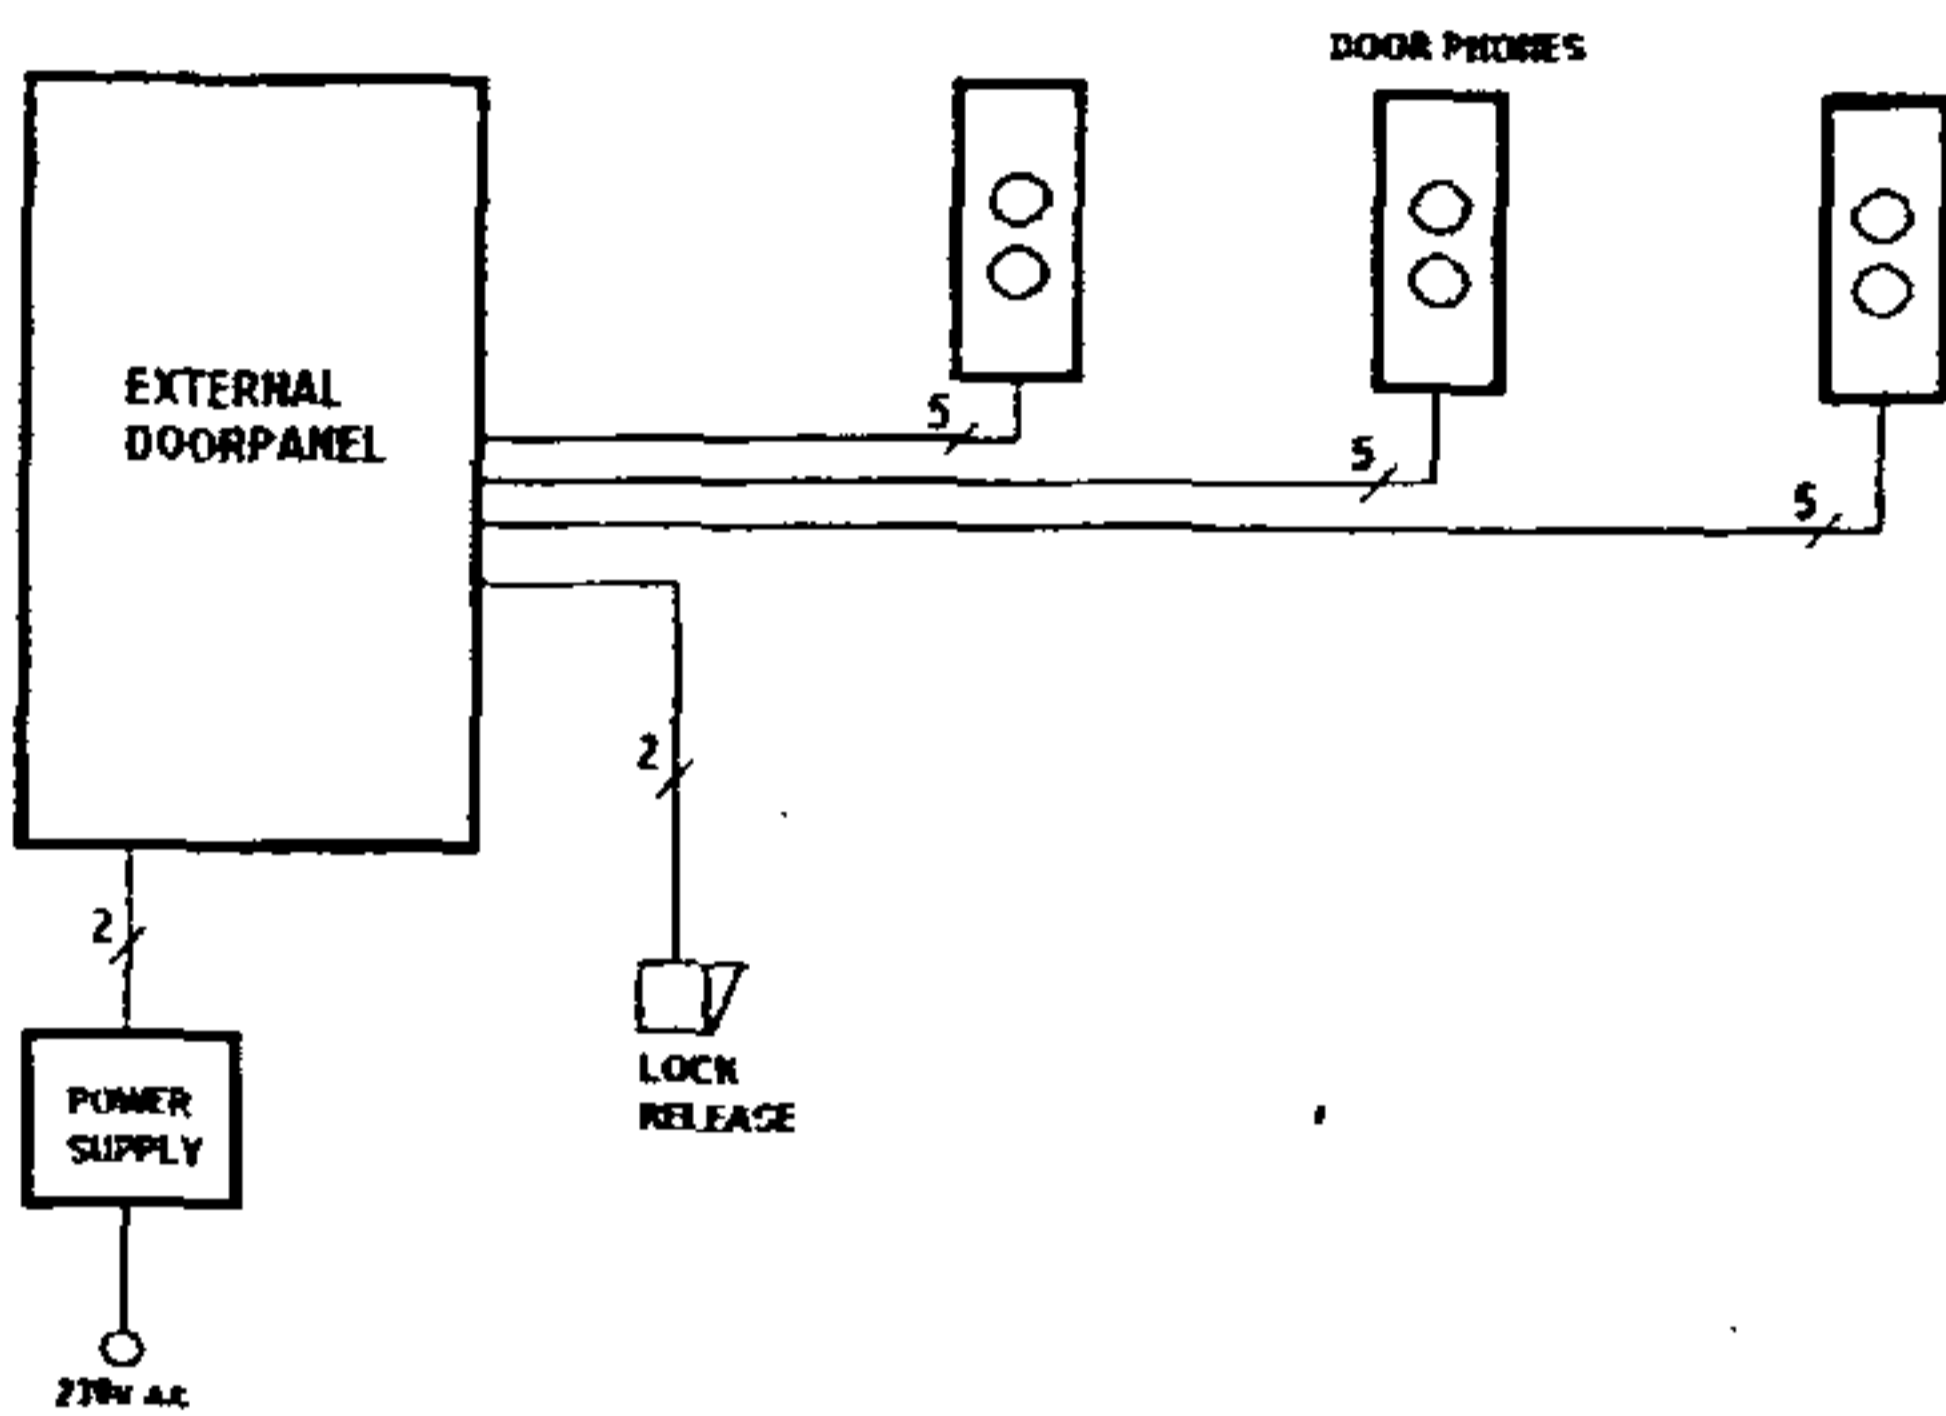

VIDEO DOOR ENTRY SCHEMATIC (4 WAY)

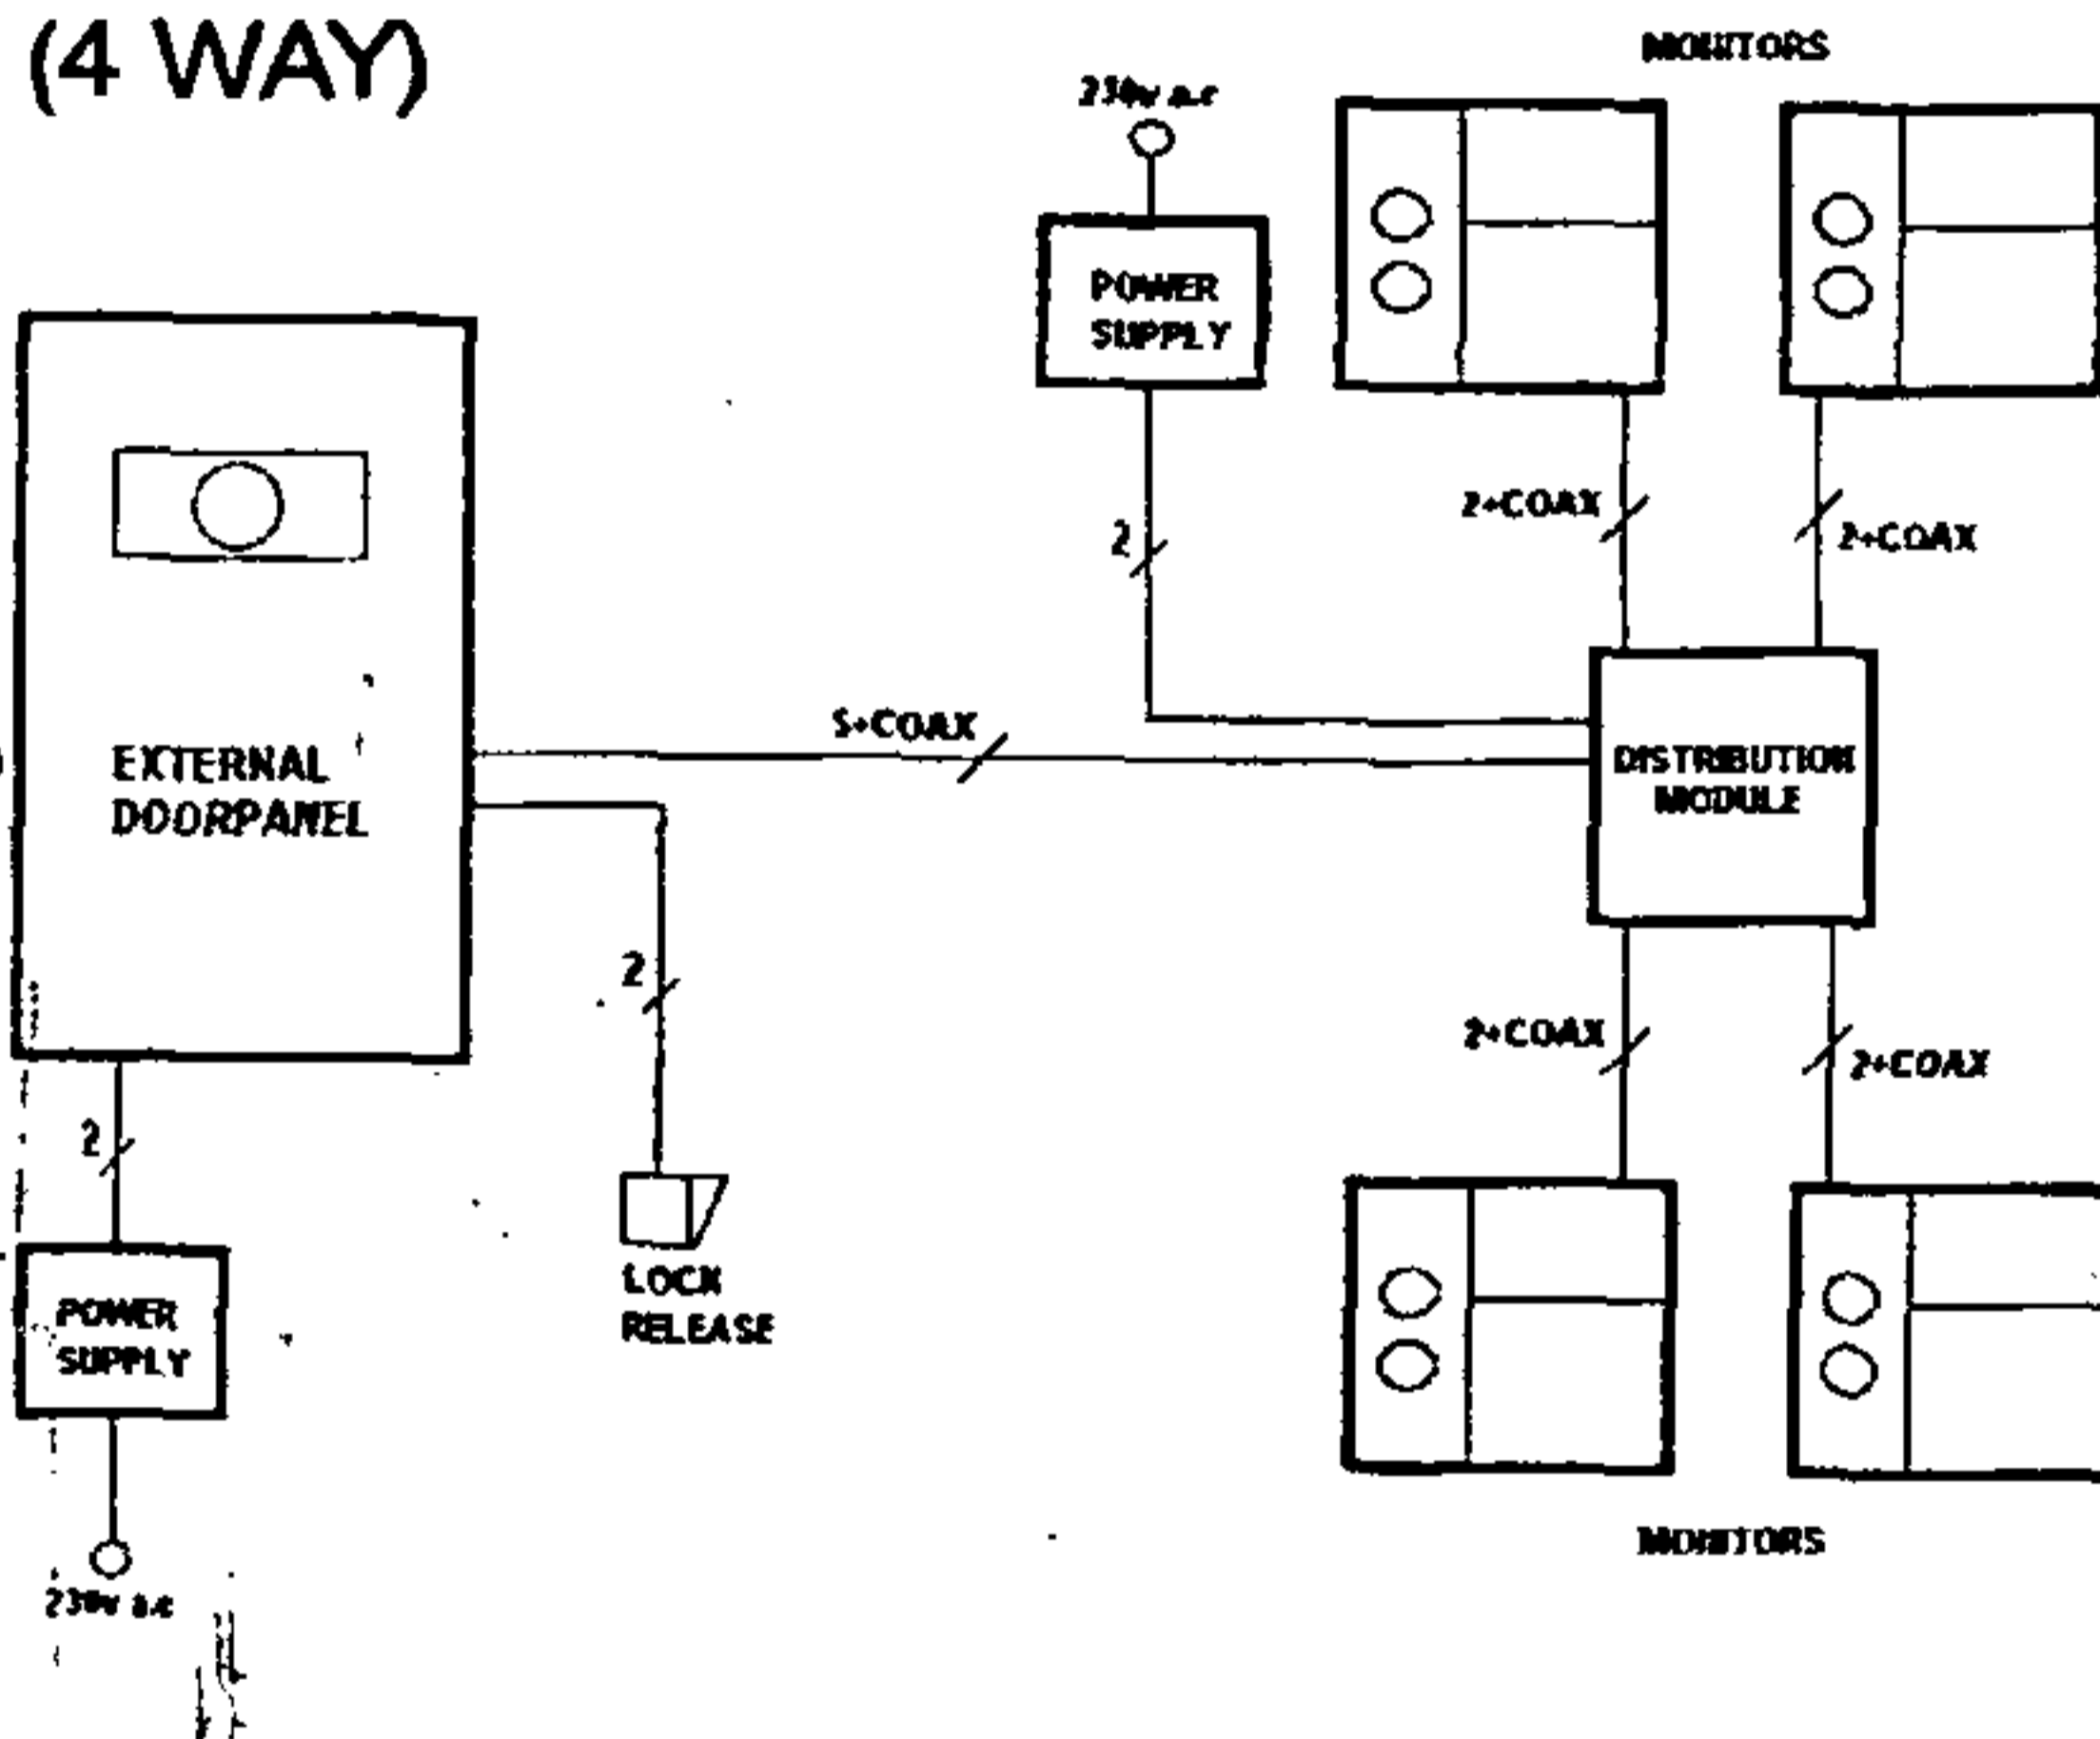

1)Q. WHAT IS THE ADVANTAGE OF INSTALLING A 2-WIRE SYSTEM OVER A 5-WIRE?

A. Easier to install (less connections), secrecy of conversation (optional), multiple entrance capability, reduced cable costs (when replacing a door-bell system often 90% of cable already installed).

2)Q. WHAT TYPE OF CABLE IS REQUIRED?

A. Each installation will require different length of cable run, cable type and cross-section are all factors which need to be considered. Multi-stranded alarm cable gives the best results - 0.2 mm sq. for 5-wire and 0.6 mm sq. for 2-wire, (do not use solid drawn cable), within 80m cable run between door and handset.

(3)Q. A WHISTLE OR 'HOWL' CAN BE HEARD FROM BOTH THE HANDSET AND ENTRANCE PANEL WHENEVER THE HANDSET IS LIFTED?

A. This noise is called acoustic feedback and is generally caused by poorly balanced volume control settings on the speaker amplifier. Poor location of panel, close handset proximity to panel, normally less than 3m, or mis-wire are just some of the other causes.

(4)Q. IS ACET DOOR-ENTRY EQUIPMENT COMPATIBLE WITH OTHER MANUFACTURER?

A. Not normally.

(5)Q. CAN MORE THAN ONE HANDSET BE CONNECTED PER WAY?

A. Handsets can be paralleled off each other except on the 55000/S kit which is not expandable. We recommend that you only parallel handsets on systems which have volume controls, do not exceed 5-handsets per way (distance between phones, cable type and cross-section, panel location are all factors in this), 5-wire systems are better for attempting multiple phone connections. Do not exceed more than two parallel handset in Pulsar range.

(6)Q. WHAT DO THE TERMS PRIVACY AND SECRECY OF CONVERSATION MEAN?

A. The term privacy relates to a switch which is installed on certain types of handset to prevent the internal buzzer from activating. Secrecy of conversation prevents other users from 'listening in' on your conversation (2-wire, 3-wire and video only).

(7)Q. CAN YOU HAVE MORE THAN ONE EXTERNAL PANEL CONNECTED?

A. Yes you can; multiple-entrance systems have now been available for some time - 2-wire, 3-wire, video and digital systems all have this capability (although there is no real limit on the amount of panels you can connect, only one user can use the system at any one time, so common sense should be applied when selecting numbers of entrance panels).

(8)Q. DOES THE VIDEO SYSTEM REQUIRE A COAXIAL CABLE?

A. You must use a 75-ohm or RG59 coaxial cable.

(9)Q. WHAT IS THE DIFFERENCE BETWEEN A FAIL-OPEN AND FAIL-SECURE LOCK RELEASE?

A. A fail-open lock release is a release which requires a permanent supply (usually 12v/24v DC) in order to lock. A fail-secure release requires a supply to unlock, commonly 12 vac.

PRODUCT SELECTOR

FEATURES	5 - wire	2 - wire	3 - wire	Trade entry	Privacy	Secrecy	Multi-Entrance	Hands Free	Integrated Keypad	Desk Mtd Handsets	Battery Back-up	Vandal Resistant	Brass Finish	Parallel Handsets
Pulsar	✓													✓
Family Kit	✓	✓												✓
Avon Range	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓				✓
Windsor Range	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			✓
Scorpion Range	✓										✓	✓		✓
Saracen Range	✓	✓	✓	✓	✓	✓		✓	✓	✓	✓	✓	✓	✓
Video			✓		✓	✓					✓			✓
Digital		✓	✓	✓	✓	✓		✓	✓	✓	✓			✓
AC411	✓							✓			✓	✓		✓

Technical Notes: DOOR ENTRY

ELECTRO – MAGNETS

Please note Magnet based Systems will typically include most of the following: Magnet, Bracket, Power Supply, Backup Battery, Exit Button, Emergency Break Glass, Keypad swipe or prox reader, Override Key Switch.

When specifying magnets you need to consider various points. Is the system designed to restrict access throughout a building? In this case a slimline magnet with a holding force up to 600 lbs will probably suffice. Is the door designed for medium security use? In this case a standard magnet with a holding force up to 1200 lbs will probably suffice. Is the door in a high security situation? In this case a shear magnet with a holding force up to 3000lbs is necessary. A shear mag is also the only type of magnet suitable for double action doors. You will also need to consider what will happen in an emergency or if there is a power failure.

Magnets are fail unlocked devices, they require a constant power source to keep them locked. A magnet is unlocked by breaking the feed from the power supply. You can also break this feed with a fire alarm relay to unlock the door in event of fire. A regulated 12V DC or 24V DC power supply should always be used.


Please ensure that the power supply specified has sufficient capacity (amps) for all the devices attached to it.

You should consider fitting a backup battery to the power supply in case of mains failure.

When interfacing with an entry system you need both a relay and a power supply for the magnet.

On most magnet systems you should always fit an emergency break glass unit. Please ensure that when fitting you do not over-tighten the armature plate.

Technical Notes: ELECTRIC LOCKING

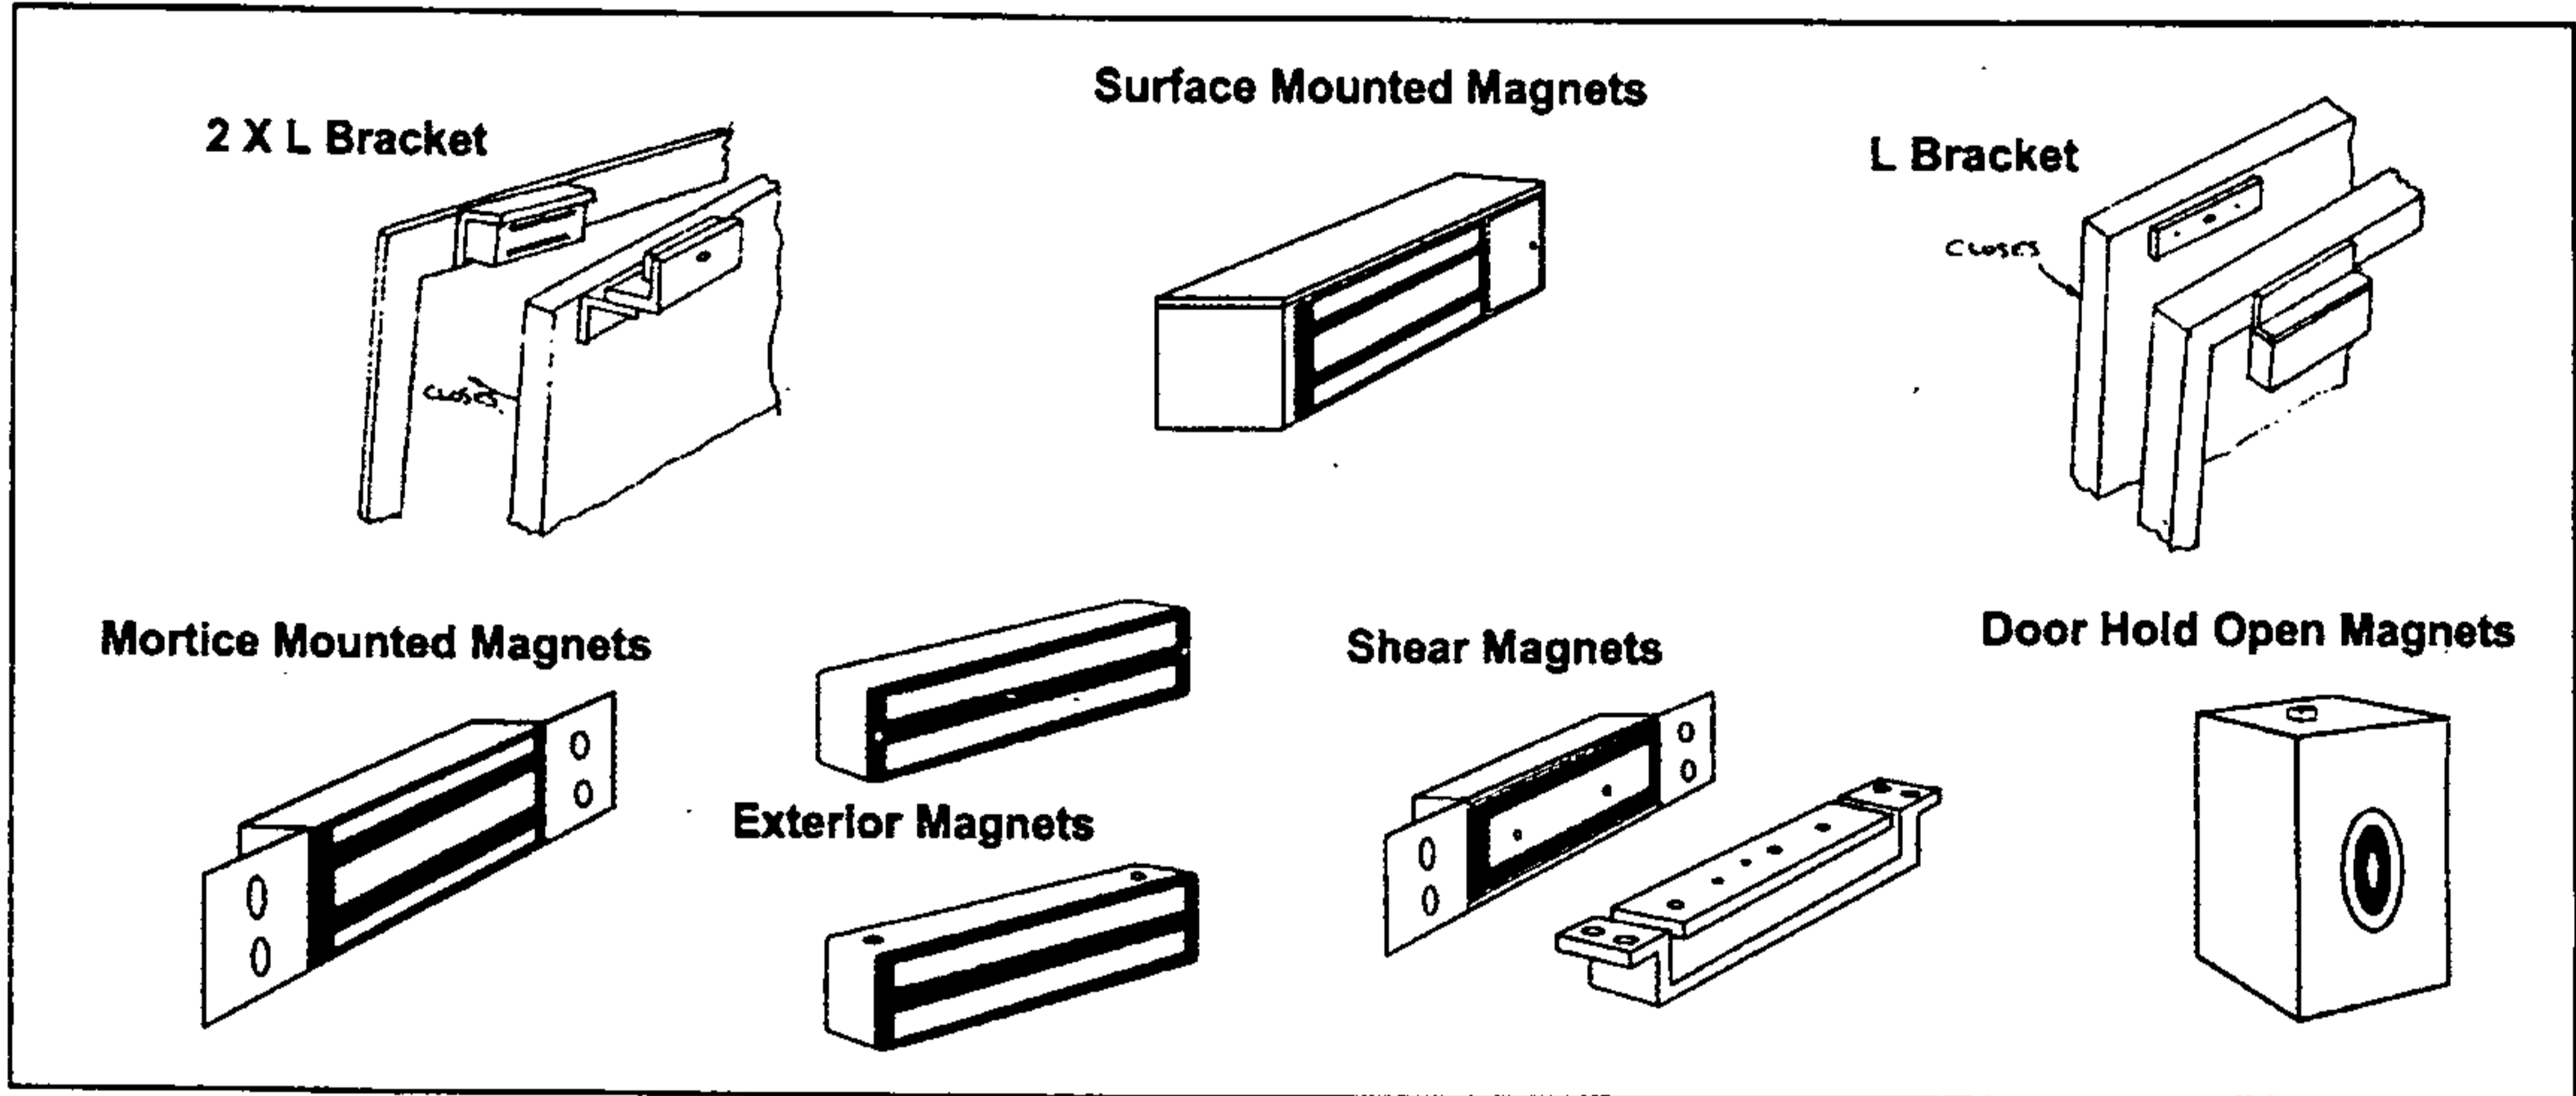

ELECTRIC RELEASE

<p>Standard Mortice Release</p> <table border="1"> <tr> <th>Looks Like</th> <th>Works With</th> </tr> <tr> <td></td> <td></td> </tr> </table> <p>The Door Opens</p> <table border="1"> <tr> <td>Inward normal door Use standard mortice If doors rebated seek advice</td> <td>Outward Fit a lockguard plate If doors rebated seek advice</td> </tr> </table>	Looks Like	Works With			Inward normal door Use standard mortice If doors rebated seek advice	Outward Fit a lockguard plate If doors rebated seek advice	<p>General Release Information</p> <p>Voltage</p> <table border="1"> <tr> <td>AC Mainly for entry systems or simple "buzz in" cant be fail unlocked</td> <td>DC Used with access control can be fail locked or fail unlocked</td> </tr> </table> <p>When Disconnected</p> <table border="1"> <tr> <td>The Latch is locked Fail Locked Fail Secure Power to Unlock Power on to Unlock Power to Open</td> <td>The latch is unlocked Fail Unlocked Fail "Safe" Power to Lock Power on to Lock Power to Close</td> </tr> </table>	AC Mainly for entry systems or simple "buzz in" cant be fail unlocked	DC Used with access control can be fail locked or fail unlocked	The Latch is locked Fail Locked Fail Secure Power to Unlock Power on to Unlock Power to Open	The latch is unlocked Fail Unlocked Fail "Safe" Power to Lock Power on to Lock Power to Close	<p>Standard Rim Release</p> <table border="1"> <tr> <th>Looks Like</th> <th>Works With</th> </tr> <tr> <td></td> <td></td> </tr> </table> <p>The Door Opens</p> <table border="1"> <tr> <td>Inward normal door Use standard rim If doors rebated fit surface case</td> <td>Outward Use outward opening surface case</td> </tr> </table>	Looks Like	Works With			Inward normal door Use standard rim If doors rebated fit surface case	Outward Use outward opening surface case
Looks Like	Works With																	
Inward normal door Use standard mortice If doors rebated seek advice	Outward Fit a lockguard plate If doors rebated seek advice																	
AC Mainly for entry systems or simple "buzz in" cant be fail unlocked	DC Used with access control can be fail locked or fail unlocked																	
The Latch is locked Fail Locked Fail Secure Power to Unlock Power on to Unlock Power to Open	The latch is unlocked Fail Unlocked Fail "Safe" Power to Lock Power on to Lock Power to Close																	
Looks Like	Works With																	
Inward normal door Use standard rim If doors rebated fit surface case	Outward Use outward opening surface case																	
<p>Deep Jaw (American)</p> <p>Has extra deep jaw to suit large latch bolts</p> <p>This Release Looks similar to the standard mortice release but has provision for a 19mm (3/4") latch bolt</p>	<p>Anal Style</p> <p>Has anal style Lip for deadlocking latches</p>	<p>Ingersol Type</p> <p>Suits Ingersol Rim Nightlatches</p>	<p>Rim Cases</p> <p>Inward Opening Used to surface mount rim release</p> <p>Outward Opening Used to reverse standard rim release for outward opening doors</p>															