

kitchenplus



kitchenplus

Tel: 03330436672

<http://kitchenplus.warrantyonline.co.uk>

 


SN: 14075041058702178044800141



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

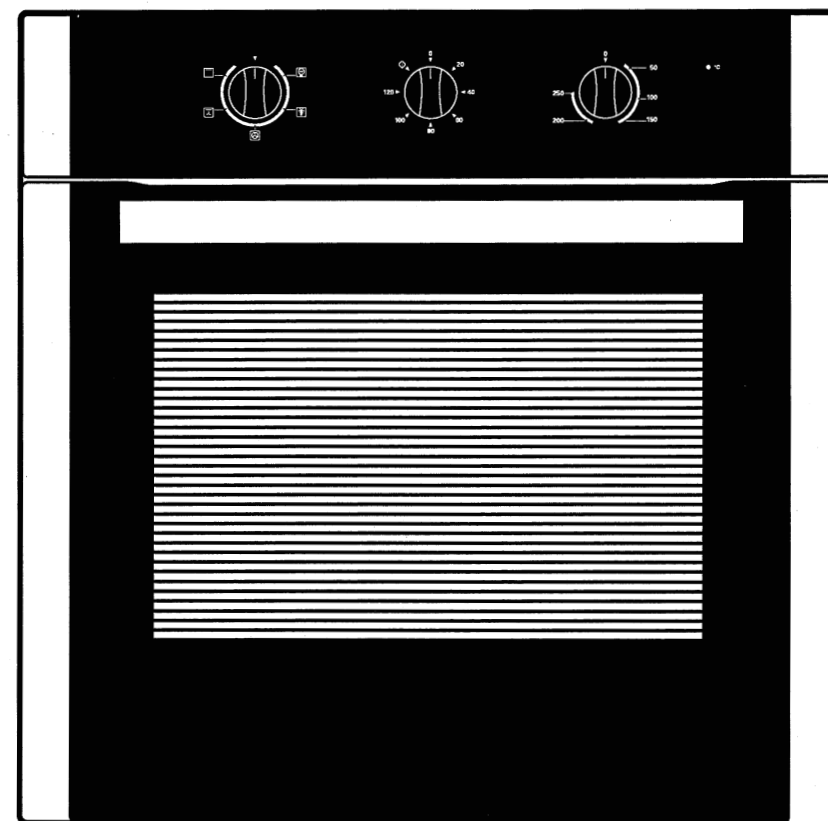

## KP15 ELECTRIC SINGLE FAN OVEN INSTRUCTION / INSTALLATION MANUAL

 
## INTRODUCTION

We recommend that you spend some time to read this manual in order to fully understand how to install and operate the product correctly. Read all the safety warnings carefully before use and keep this manual for future reference. Ensure that others who may use the product are also familiar with this manual.

## WARNING

- When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. This is completely normal and if it does occur, wait for the smell to clear before putting any food into the oven.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass of the oven. This can scratch the surface and may result in permanent damage to the glass.
- During use, the appliance becomes very hot. Care should be taken to avoid touching heating elements inside the oven.
- Do not allow children to go near the oven when it is operating, especially when the grill is on.
- Ensure that the appliance is switched off before replacing the oven lamp to avoid the possibility of electric shock.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring specifications.
- Conductors of supply cords shall have a nominal cross-sectional area no less than 3G1.5mm<sup>2</sup>.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.

## INSTALLATION

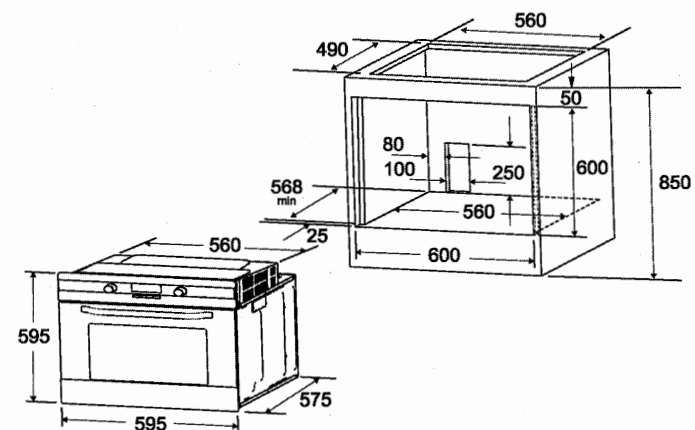

## CLEANING & MAINTENANCE

This appliance should not require a lot of maintenance but it is important to keep it clean to ensure it stays in proper working order. The parts of this oven which come into contact with food must be cleaned regularly. Before you commence any cleaning or maintenance, disconnect the power and set all controls to the OFF position. Wait until the inside of the unit is not hot but only slightly warm - cleaning is easier when the oven is very slightly warm.

Clean surfaces of the unit with a damp cloth, soft brush or fine sponge and then wipe dry. In case of heavy soiling, use hot water with a non-abrasive cleaning product.

 
For cleaning the glass of the oven door, do not use abrasive cleaners or sharp metal scrapers, these can scratch the surface or lead to the glass being damaged. Never leave acidic substances (lemon juice, vinegar) on stainless steel parts. Do not use a high pressure cleaner for the cleaning unit. The baking pans may be washed in mild detergent.

P/N:16171100A06945

# INSTALLATION


## SECURING THE OVEN TO THE CABINET

1. Fit oven into the cabinet recess.
2. Open the oven door.
3. Secure the oven to the kitchen cabinet with two distance holders "A" which fit the holes in the oven frame and fit the two wood screws "B".

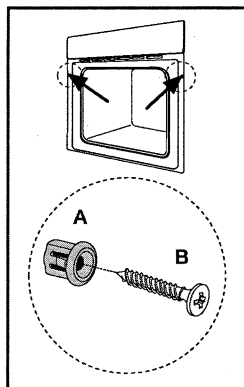


## VENTILATING OPENINGS

 When cooking finish, the cavity temperature is oven 70 degree. The ventilating opening will continue working for 15 minutes after the oven stop cooking.

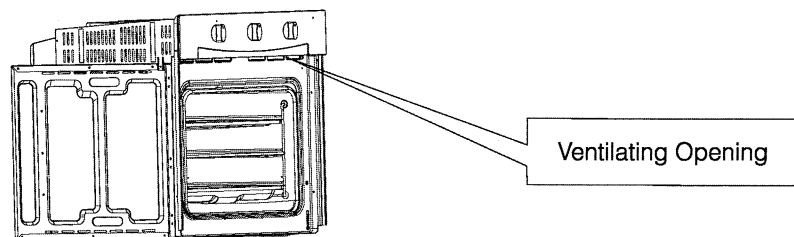

## CONNECTION OF THE OVEN

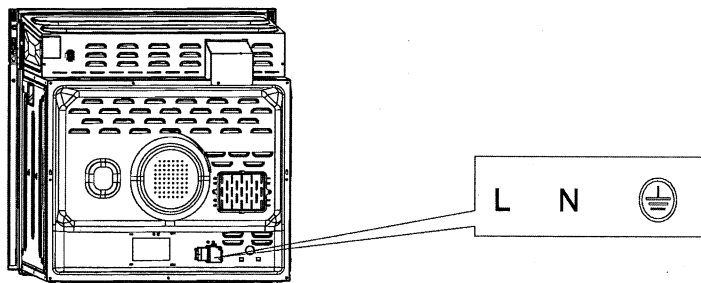 

# SAFETY HINTS

The oven must be used only of the purpose for which it was designed; it must only be used for cooking food. Any other use, e.g. as a form of heating is a breach of use and is therefore dangerous. The manufacturer will not be held liable or responsible for any damage to a property caused through incorrect use. When using any electrical appliance you must follow a few basic rules:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If these instructions are not adhered to the manufacturer cannot guarantee the safe operation of the oven.
- Do not use the power cord with an adapter, power board or extension cable.
- If the cable is damaged it must be replaced promptly by a qualified technician:
- If the power cable is replaced it must be replaced with one of identical rating and type.
- Cable replacement must be carried out by qualified and competent technicians.
- Heating resistance temperature of power cord is above 70°C. The power cord should be connected with duplex switch, which is no less than 250V and 20A (no need to be connected with plug).
- If the oven breaks down or develops a fault, switch it off at the mains and do not touch it. Please contact the After Sales Service Centre.
- Oven door should be opened as little as possible when cooking.
- The appliance must be installed by an authorized technician. The manufacturer is not responsible for any damage that might be caused by incorrect installation or installation carried out by unauthorized personnel.

## SAFETY HINTS

---

- When the door or drawer of oven is open, do not place anything onto it, you may unbalance your appliance or break the door.
- After use, this appliance will retain heat for a long time. It is important to wait for the appliance to cool down before touching any parts which have been directly exposed to heat.
- It is advised that you unplug your appliance from the mains if you will not be using it for a long time.
- Before cleaning, remove all of the accessories from the inside of the oven and any excess spillage from cooking.
- A steam cleaner must not be used to clean the oven.

## ACCESSORIES

---

### **BULB REPLACEMENT**

 
The light bulb inside of the oven has high temperature resistance (240V~25W).

For replacements, proceed as follows:


1. Disconnect power from the mains outlet or switch off the circuit breaker of the unit's mains outlet.
2. Unscrew the cover glass and replace the bulb with a new one of the same type: 25W 230V E14 oven lamp designed to operate up to 300°C.
3. Screw the cover glass back in place.

## ACCESSORIES


**Wire shelving x 2**

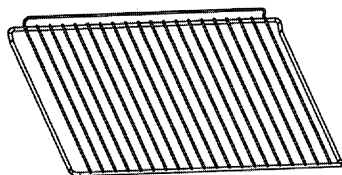

 **Slider bracket** (already installed but can be removed for cleaning oven walls).

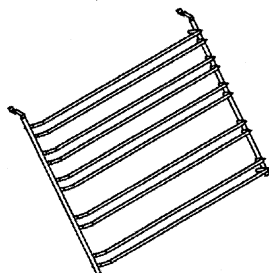

**Grill pan**

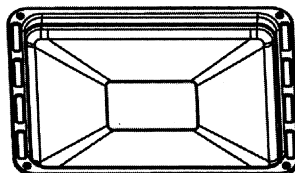 

### **SHELF PLACEMENT WARNING:**

To ensure the oven shelves operate safely, correct placement of the shelves between the side rails is imperative. This will ensure that during careful removal of the shelf or tray, hot food items should not slide out.

## FITTING THE OVEN

This oven can be fitted either into a kitchen unit (underneath a work top) or into an upright cupboard. Fix the oven in position by screwing it into place using the two fixing holes in the frame. To locate the fixing holes, open the oven door and look along the inside of the frame. To allow adequate ventilation, the measurements and distances in this manual must be adhered to when fixing the oven. For more information regarding installation, please go to page 10 & 11.

## IMPORTANT

For the oven to operate efficiently, the kitchen unit housing must be suitable. The kitchen unit panels that surround the oven must be made of a heat resistant material. Ensure that any units which are made from veneered wood can withstand temperatures of at least 120°C. Plastics or glues that cannot withstand such temperatures will melt and deform the unit. Once the oven has been fixed into the units, electrical parts must be completely insulated. This is a legal safety requirement. All guards must be firmly fixed into place so that it is impossible to remove them without using special tools. Remove the back of the kitchen unit to ensure an adequate current of air circulates around the oven. The hob must have a rear gap of at least 45mm.

## DECLARATION OF COMPLIANCE

When unpacked, ensure that the oven has not been damaged in any way. If you have any doubts about the condition of your new oven, please contact us. Keep packaging materials such as plastic bags, polystyrene and nails out of the reach of children.

Tel: 03330436672



# HOW TO USE

 
With the switch in the stay on or constant mode the oven will not switch off after the pre-set time. Please note: the food may catch fire if the cooking time is set too long. Close supervision is necessary during toasting foods and the time should not be set too long.

NOTE: For cooking times which are under sixty minutes, first set to a longer time and then turn the switch back to the time you require.

- To set functions by turning the function knob to desired level. The oven will automatically start cooking after function, time and temperature are set.
- To set the time of cooking by turning the timer knob to desired time per your food cooking guide.
- After the cooking time is up, the unit will “Ding” to stop.
- To set the temperature by turning the temperature knob. If the unit is not in use, always set the knobs to “0”.

# PRODUCT DESCRIPTION

## Control Panel

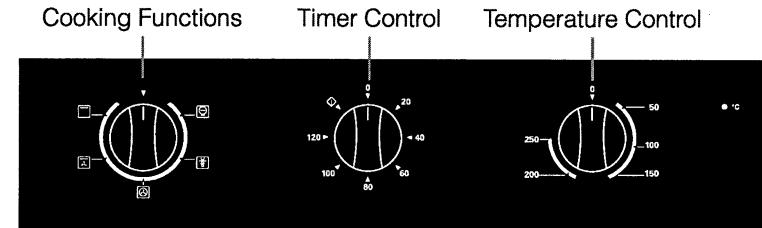

Symbol	Function Description
	Oven Lamp: Enables the user to observe the progress of cooking without opening the door.
	Defrost: The circulation of air at room temperature enables quicker thawing of frozen food, (without the use of any heat). It's a gentle but quick way to speed up the defrosting time and thawing of ready-made dishes and cream filled produce etc.
	Radiant grilling: The inner grill element switches on and off to maintain temperature. Best results can be obtained from using the top shelf for small items and lower shelves for large items.
	Double grilling with fan: The inside radiant element and top element are working with fan
	Convectional with fan: Combination of the fan and both heating elements provides more even heat penetration, saving up to 30-40% of energy. Dishes are lightly browned on the outside and still moist on the inside. Note: This function is suitable for grilling or roasting big pieces of meat at a higher temperature.

Please remember: To open the oven door, always use one hand to hold the handle in the centre and do not touch the child safety lock.